

**SECTION 1: Identification of the substance/mixture and of the company/undertaking**
**1.1. Product identifier**

Trade name : Aussie Membrane 520

Product form : Mixture

**1.2. Relevant identified uses of the substance or mixture and uses advised against**
**1.3. Details of the supplier of the safety data sheet**

AVM Industries, Inc.  
 8245 Remmet Ave  
 Canoga Park, CA 91304  
 Tel: 818-888-0050  
 www.avmindustries.com

**1.4. Emergency telephone number**

No additional information available

**SECTION 2: Hazards identification**
**2.1. Classification of the substance or mixture**
**GHS-US classification**

Skin Irrit. 2 H315

Eye Irrit. 2A H319

Skin Sens. 1 H317

**2.2. Label elements**
**GHS-US labelling**

Hazard pictograms (GHS-US) :



GHS07

Signal word (GHS-US)

**Warning**

Hazard statements (GHS-US)

: H315 - Causes skin irritation

H317 - May cause an allergic skin reaction

H319 - Causes serious eye irritation

Precautionary statements (GHS-US)

: P261 - Avoid breathing mist, vapours

P264 - Wash hands, forearms and face thoroughly after handling

P272 - Contaminated work clothing must not be allowed out of the workplace

P280 - Wear eye protection, face protection, protective gloves, protective clothing

P302+P352 - If on skin: Wash with plenty of soap and water

P305+P351+P338 - IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing

P321 - Specific treatment (see first aid instructions on this label)

P333+P313 - If skin irritation or rash occurs: Get medical advice/attention

P337+P313 - If eye irritation persists: Get medical advice/attention

P362+P364 - Take off contaminated clothing and wash it before reuse

P363 - Wash contaminated clothing before reuse

P501 - Dispose of contents/container to a licensed hazardous-waste disposal contractor or collection site except for empty clean containers which can be disposed of as non-hazardous waste

**2.3. Other hazards**

No additional information available

**2.4. Unknown acute toxicity (GHS US)**

No data available

**SECTION 3: Composition/information on ingredients**
**3.1. Substance**

Not applicable

**3.2. Mixture**

Name	Product identifier	%
Phosphonic acid, (2-ethylhexyl)-, bis(2-ethylhexyl) ester	(CAS No) 126-63-6	10 - 30*

\*In accordance with paragraph (i) of the OSHA Hazard Communication Standard (29 CFR §1910.1200), the specific chemical identity or exact weight % has been withheld as a trade secret

# Aussie Membrane 520

## Safety Data Sheet

Prepared according to Federal Register / Vol. 77, No. 58 / Monday, March 26, 2012 / Rules and Regulations

### SECTION 4: First aid measures

#### 4.1. Description of first aid measures

First-aid measures general

: If exposed or concerned, get medical attention/advice. Show this safety data sheet to the doctor in attendance. Wash contaminated clothing before re-use. Never give anything to an unconscious person.

First-aid measures after inhalation

: IF INHALED: Remove to fresh air and keep at rest in a position comfortable for breathing. Get medical attention if breathing is affected. If breathing is difficult, supply oxygen.

First-aid measures after skin contact

: IF ON SKIN (or clothing): Remove affected clothing and wash all exposed skin with water for at least 15 minutes. If irritation develops or persists, get medical attention.

First-aid measures after eye contact

: IF IN EYES: Immediately flush with plenty of water for at least 15 minutes. Remove contact lenses if present and easy to do so. If pain, blinking, or irritation develops or persists, get medical attention. Continue rinsing.

First-aid measures after ingestion

: IF SWALLOWED: rinse mouth thoroughly. Do not induce vomiting without advice from poison control center or medical professional. Get medical attention if you feel unwell.

#### 4.2. Most important symptoms and effects, both acute and delayed

Symptoms/injuries

: Causes skin irritation. May cause an allergic skin reaction. Causes serious eye irritation.

Symptoms/injuries after inhalation

: May cause respiratory irritation.

Symptoms/injuries after skin contact

: Causes skin irritation. May cause an allergic skin reaction.

Symptoms/injuries after eye contact

: Causes serious eye irritation.

Symptoms/injuries after ingestion

: May cause gastrointestinal irritation.

#### 4.3. Indication of any immediate medical attention and special treatment needed

No additional information available.

### SECTION 5: Firefighting measures

#### 5.1. Extinguishing media

Suitable extinguishing media

: Water spray. carbon dioxide (CO<sub>2</sub>). Sand. Extinguishing powder. Foam.

#### 5.2. Special hazards arising from the substance or mixture

Fire hazard

: Heating may cause a fire.

Explosion hazard

: Product does present an explosion hazard.

Reactivity

: No dangerous reactions known under normal conditions of use.

#### 5.3. Advice for firefighters

Precautionary measures fire

: Keep away from heat, hot surfaces, sparks, open flames and other ignition sources. No smoking.

Firefighting instructions

: Use water spray or fog for cooling exposed containers. Exercise caution when fighting any chemical fire. Do not dispose of fire-fighting water in the environment.

Protection during firefighting

: Do not enter fire area without proper protective equipment, including respiratory protection.

Other information

: Dense smoke emitted when burned without sufficient oxygen.

### SECTION 6: Accidental release measures

#### 6.1. Personal precautions, protective equipment and emergency procedures

General measures

: Evacuate area. Ventilate area. Keep upwind. Spill should be handled by trained clean-up crews properly equipped with respiratory equipment and full chemical protective gear (see Section 8).

##### 6.1.1. For non-emergency personnel

Protective equipment

: Wear Protective equipment as described in Section 8.

Emergency procedures

: Evacuate unnecessary personnel.

##### 6.1.2. For emergency responders

Protective equipment

: Wear suitable protective clothing, gloves and eye or face protection. Approved supplied-air respirator, in case of emergency.

#### 6.2. Environmental precautions

Prevent entry to sewers and public waters. Notify authorities if liquid enters sewers or public waters. Avoid release to the environment.

#### 6.3. Methods and material for containment and cleaning up

For containment

: Contain any spills with dikes or absorbents to prevent migration and entry into sewers or streams.

Methods for cleaning up

: Ensure there is adequate ventilation. Soak up spills with inert solids, such as clay or diatomaceous earth as soon as possible. This material and its container must be disposed of in a safe way, and as per local legislation.

#### 6.4. Reference to other sections

See Sections 8 and 13.

# Aussie Membrane 520

## Safety Data Sheet

Prepared according to Federal Register / Vol. 77, No. 58 / Monday, March 26, 2012 / Rules and Regulations

### SECTION 7: Handling and storage

#### 7.1. Precautions for safe handling

Precautions for safe handling

: Do not handle until all safety precautions have been read and understood. Use only in well-ventilated areas. Do not get in eyes, on skin, or on clothing. Wash hands and other exposed areas with mild soap and water before eating, drinking or smoking and when leaving work. Keep away from sources of ignition - No smoking.

#### 7.2. Conditions for safe storage, including any incompatibilities

Technical measures

: Take precautionary measures against static discharge.

Storage conditions

: Store in a dry, cool and well-ventilated place. Keep the container tightly closed. Protect from sunlight. Prevent exposure to water. Store away from flammable substances. Containers which are opened should be properly resealed and kept upright to prevent leakage.

### SECTION 8: Exposure controls/personal protection

#### 8.1. Control parameters

Phosphonic acid, (2-ethylhexyl)-, bis(2-ethylhexyl) ester (126-63-6)	
Remark (ACGIH)	OELs not established
Remark (OSHA)	OELs not established

#### 8.2. Exposure controls

Appropriate engineering controls

: Provide adequate general and local exhaust ventilation. Use process enclosures, local exhaust ventilation, or other engineering controls to control airborne levels below recommended exposure limits. Use explosion-proof equipment with flammable materials. Ensure adequate ventilation, especially in confined areas.

Personal protective equipment

: Gloves. Protective goggles. Protective clothing.



Hand protection

: Use gloves chemically resistant to this material when prolonged or repeated contact could occur. Gloves should be classified under Standard EN 374 or ASTM F1296. Suggested glove materials are: Neoprene, Nitrile/butadiene rubber, Polyethylene, Ethyl vinyl alcohol laminate, PVC or vinyl. Suitable gloves for this specific application can be recommended by the glove supplier.

Eye protection

: Wear eye protection, including chemical splash goggles and a face shield when possibility exists for eye contact due to spraying liquid or airborne particles.

Skin and body protection

: Wear long sleeves, and chemically impervious PPE/coveralls to minimize bodily exposure.

Respiratory protection

: Use NIOSH-approved dust/particulate respirator. Where vapor, mist, or dust exceed PELs or other applicable OELs, use NIOSH-approved respiratory protective equipment.

### SECTION 9: Physical and chemical properties

#### 9.1. Information on basic physical and chemical properties

Physical state	: Liquid
Appearance	: Sticky liquid.
Color	: Grey.
Odor	: No data available
Odor Threshold	: No data available
pH	: No data available
Relative evaporation rate (butylacetate=1)	: No data available
Melting point	: No data available
Freezing point	: No data available
Boiling point	: No data available
Flash point	: No data available
Auto-ignition temperature	: No data available
Decomposition temperature	: No data available
Flammability (solid, gas)	: No data available
Vapour pressure	: No data available
Relative vapour density at 20 °C	: No data available
Relative density	: No data available
Solubility	: Insoluble in water.
Log Pow	: No data available

# Aussie Membrane 520

## Safety Data Sheet

Prepared according to Federal Register / Vol. 77, No. 58 / Monday, March 26, 2012 / Rules and Regulations

Log Kow	: No data available
Viscosity, kinematic	: No data available
Viscosity, dynamic	: No data available
Explosive properties	: Product does present an explosion hazard.
Oxidising properties	: No data available
Explosive limits	: No data available

### 9.2. Other information

No additional information available

## SECTION 10: Stability and reactivity

### 10.1. Reactivity

No dangerous reactions known under normal conditions of use.

### 10.2. Chemical stability

Stable under recommended handling and storage conditions (see section 7).

### 10.3. Possibility of hazardous reactions

None known.

### 10.4. Conditions to avoid

Heat. Open flame. Sparks.

### 10.5. Incompatible materials

Strong oxidizing agents. Nitric acid. Sulfuric Acid. Lead. acetic anhydride. Nitrobenzene. Ethylene oxide. hydrofluoric acid. Chlorine.

### 10.6. Hazardous decomposition products

Carbon oxides (CO, CO<sub>2</sub>). Water vapor. Volatile organic compounds.

## SECTION 11: Toxicological information

### 11.1. Information on toxicological effects

Acute toxicity	: Not classified
Skin corrosion/irritation	: Causes skin irritation.
Serious eye damage/irritation	: Causes serious eye irritation.
Respiratory or skin sensitisation	: May cause an allergic skin reaction.
Germ cell mutagenicity	: Not classified
Carcinogenicity	: Not classified
Reproductive toxicity	: Not classified
Specific target organ toxicity (single exposure)	: Not classified
Specific target organ toxicity (repeated exposure)	: Not classified.
Aspiration hazard	: Not classified
Symptoms/injuries after inhalation	: May cause respiratory irritation.
Symptoms/injuries after skin contact	: Causes skin irritation. May cause an allergic skin reaction.
Symptoms/injuries after eye contact	: Causes serious eye irritation.
Symptoms/injuries after ingestion	: May cause gastrointestinal irritation.

## SECTION 12: Ecological information

### 12.1. Toxicity

Ecology - general : May cause long-term adverse effects in the environment.

### 12.2. Persistence and degradability

Aussie Membrane 520	
Persistence and degradability	Heavily removable from water.

### 12.3. Bioaccumulative potential

Aussie Membrane 520	
Bioaccumulative potential	May be accumulated in organism.

### 12.4. Mobility in soil

No additional information available

### 12.5. Other adverse effects

No additional information available

# Aussie Membrane 520

## Safety Data Sheet

Prepared according to Federal Register / Vol. 77, No. 58 / Monday, March 26, 2012 / Rules and Regulations

### SECTION 13: Disposal considerations

#### 13.1. Waste treatment methods

Waste treatment methods : Obtain the consent of pollution control authorities before discharging to wastewater treatment plants.

Waste disposal recommendations : Dispose in a safe manner in accordance with local/national regulations. Do not allow the product to be released into the environment.

### SECTION 14: Transport information

In accordance with DOT

Not hazardous for transport

#### Additional information

Other information : No supplementary information available.

#### Transport by sea

No additional information available

#### Air transport

No additional information available

### SECTION 15: Regulatory information

#### 15.1. US Federal regulations

##### Aussie Membrane 520

All chemical substances in this product are listed in the EPA (Environment Protection Agency) TSCA (Toxic Substances Control Act) Inventory or are exempt

SARA Section 311/312 Hazard Classes	Immediate (acute) health hazard
-------------------------------------	---------------------------------

#### 15.2. International regulations

No additional information available.

#### 15.3. US State regulations

This product does not contain any substances known to the state of California to cause cancer and/or reproductive harm

##### Talc (14807-96-6)

U.S. - Massachusetts - Right To Know List

U.S. - New Jersey - Right to Know Hazardous Substance List

U.S. - Pennsylvania - RTK (Right to Know) List

### SECTION 16: Other information

Indication of changes : Revision 1.0: New SDS Created.

Revision date : 03/14/2016

Other information : Author: BCS.

NFPA health hazard


: 2 - Intense or continued exposure could cause temporary incapacitation or possible residual injury unless prompt medical attention is given.

NFPA fire hazard

: 1 - Must be preheated before ignition can occur.

NFPA reactivity

: 0 - Normally stable, even under fire exposure conditions, and are not reactive with water.

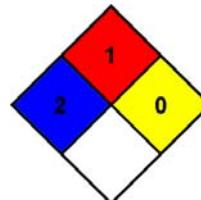

#### HMIS III Rating

Health : 2

Flammability : 1

Physical : 0

Personal Protection :

This information is based on our current knowledge and is intended to describe the product for the purposes of health, safety and environmental requirements only. It should not therefore be construed as guaranteeing any specific property of the product

# AVM System 520, Aussie 520

## Heavy Duty Below Grade Polyurethane Waterproofing Membrane

### Generic Spec

Section 071000 / 071400 / 071416

Fluid Applied Waterproofing

### Product Name

AVM System 520, Aussie Membrane

### AVM System No.

AVM System 520

### By

AVM Industries, Inc.  
8245 Remmet Ave, Canoga Park, CA 91304  
888.414.1041 818.888.0050  
[www.avmindustries.com](http://www.avmindustries.com)

### Product Description

The **AVM Aussie Membrane 520** is a vapor-proof, Gray liquid polyurethane, which dries to a tough, seamless flexible waterproof membrane. The **Aussie Membrane 520** is a single component cold-applied polyurethane liquid. It exhibits excellent adhesion, strength, elongation and recovery properties.

### Where to Use

**Retaining Walls:** Waterproof below-grade, concrete, block walls, basements, etc.

**Planters:** Waterproof planters and other landscaping features.

**In-between slab waterproofing:** To provide a sandwich membrane in-between two concrete slabs or over wood decks that will receive a topping slab. Also used as an under-tile membrane when an un-bonded mud-bed or thick-set type assembly is required.

### Warranty

AVM Industries will warranty the installed membrane for a period of five (5) years. Ten (10) year warranties are also available. For complete warranty details, contact AVM Industries or consult with your applicator.



### Delivery, Storage, and Handling

- Delivery of all the **AVM System 520** materials to the job site must be in their original sealed containers, with manufacturer's name and label intact.
- Handle and store containers in accordance with printed instructions.
- Store at temperatures between 50°F and 90°F. Do not store materials in direct sunlight or where they may be damaged by water or rain.
- Failure to comply with the recommended storage conditions may result in premature deterioration of the product. For specific storage advice, please contact AVM Industries and/or its representatives.
- Keep all materials out of the reach of children.
- If irritation occurs during use, liberally flush affected areas with water. If irritation continues, see a physician immediately.

### Project Conditions

- All surfaces to which the **Aussie Membrane 520** is applied to must be sound and stable, with an even finish and free from dust, loose debris, grease, curing agents, etc.
- The **Aussie Membrane 520** may be applied to damp but not waterlogged surfaces (Green Concrete)
- Do not apply materials at temperatures below 40°F and falling or if precipitation is imminent. Do not apply materials in direct sunlight at temperatures above 100°F or rising.
- Warn personnel against hazards of materials to skin and eyes. Note other hazardous conditions on the job that might require special protective gear and/or any other special protective or safety procedures.
- Protect adjacent surfaces which could be damaged during the application procedure.
- This system must not be used to cover Expansion Joints.

### System Application

Read the **AVM System 520** Installation Instructions Prior to Installation. Application instructions vary based on type of application and the type of surfaces it's being applied to. For specific application procedures, refer to, or download the appropriate installation instructions. (For Retaining Walls, refer to the "Retaining Walls Installation Instructions". For Planters, refer to the "Planters Installation Instructions", etc.)

Basic installation procedures are also provided in the "Tech Data Sheet" of each type of installation. For a complete/comprehensive set of instructions, however, please refer to the "Installation Instructions" documents.

### Quality Control

- Visually inspect all coated surfaces to ensure a full and proper coating application, especially at corners, drainage footings and other hard-to-reach areas.
- All unsatisfactory areas shall be repaired prior to final acceptance.

### Protection of Installed Work

- The completed section shall be protected for the first 24 hours after application or until the surface is sufficiently cured. (The amount of drying time may vary depending on temperature and humidity conditions)
- Always protect the waterproofing from possible damage. Use Drainage Boards or AVM Approved Protective Panels. Refer to the "Installation Instructions" or to the "Aussie Membrane 520 Min Thickness Table" for protection details.

### Availability and Cost

Contact AVM Industries or your approved applicator for pricing and availability.

### Technical Services

Technical services are available by contacting our offices at: **888.414.1041** or **818.888.0050** or visit [www.avmindustries.com](http://www.avmindustries.com)

### System Specifications

See next page.

Packaging	Approximate Shipping Weights	VOC
AVM Aussie Membrane 520, 5.0 gal. pails	Approx 58 lbs.	75 Grams/Liter

Technical Information	Standard Values	Test Results
Color	Gray	
Coverage: (Varies depending on substrate)	25 sq.ft./Gal. @ 60 Dry Mills	
Service Temperature	-25°F-177°F (-31°C to +80°C)	
Application Temperature	40°F-100°F (+4°C to 38°C)	
Low Temperature Flexibility	-40°F (-40°C)	No cracking at -40°F
Tensile Strength (MPa)	≥1.90	2.79
Elongation at break	≥520%	726%
Tearing Strength (N/mm)	≥12	15
Water Impermeability (at 0.3MPa, 30 minute duration)	Impermeable	Impermeable
Solid Content	80+%	95%+
Tack Free Time (Hours) <sup>1</sup>	≤12	≤10
Curing Time (Hours) <sup>2</sup>	≤24	≤20

1. Based on controlled tests. Tack free times will vary based on thickness, temperature, humidity and other job conditions.

2. Based on controlled tests. Cure times will vary based on thickness, temperature, humidity and other job conditions

For a complete list of details in CAD or PDF, please visit our website at [www.avmindustries.com](http://www.avmindustries.com).

**AVM Industries, Inc.**  
**8245 Remmet Ave, Canoga Park, CA 91304**  
**888.414.1041 818.888.0050**

**Quality Waterproofing Products**

**[www.avmindustries.com](http://www.avmindustries.com)**




DETAIL #:  
AVM-0520-0002-C

AVM SYSTEM 520

AUSSIE MEMBRANE 520

Retaining Walls  
Slab on Grade at Top of Footing  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

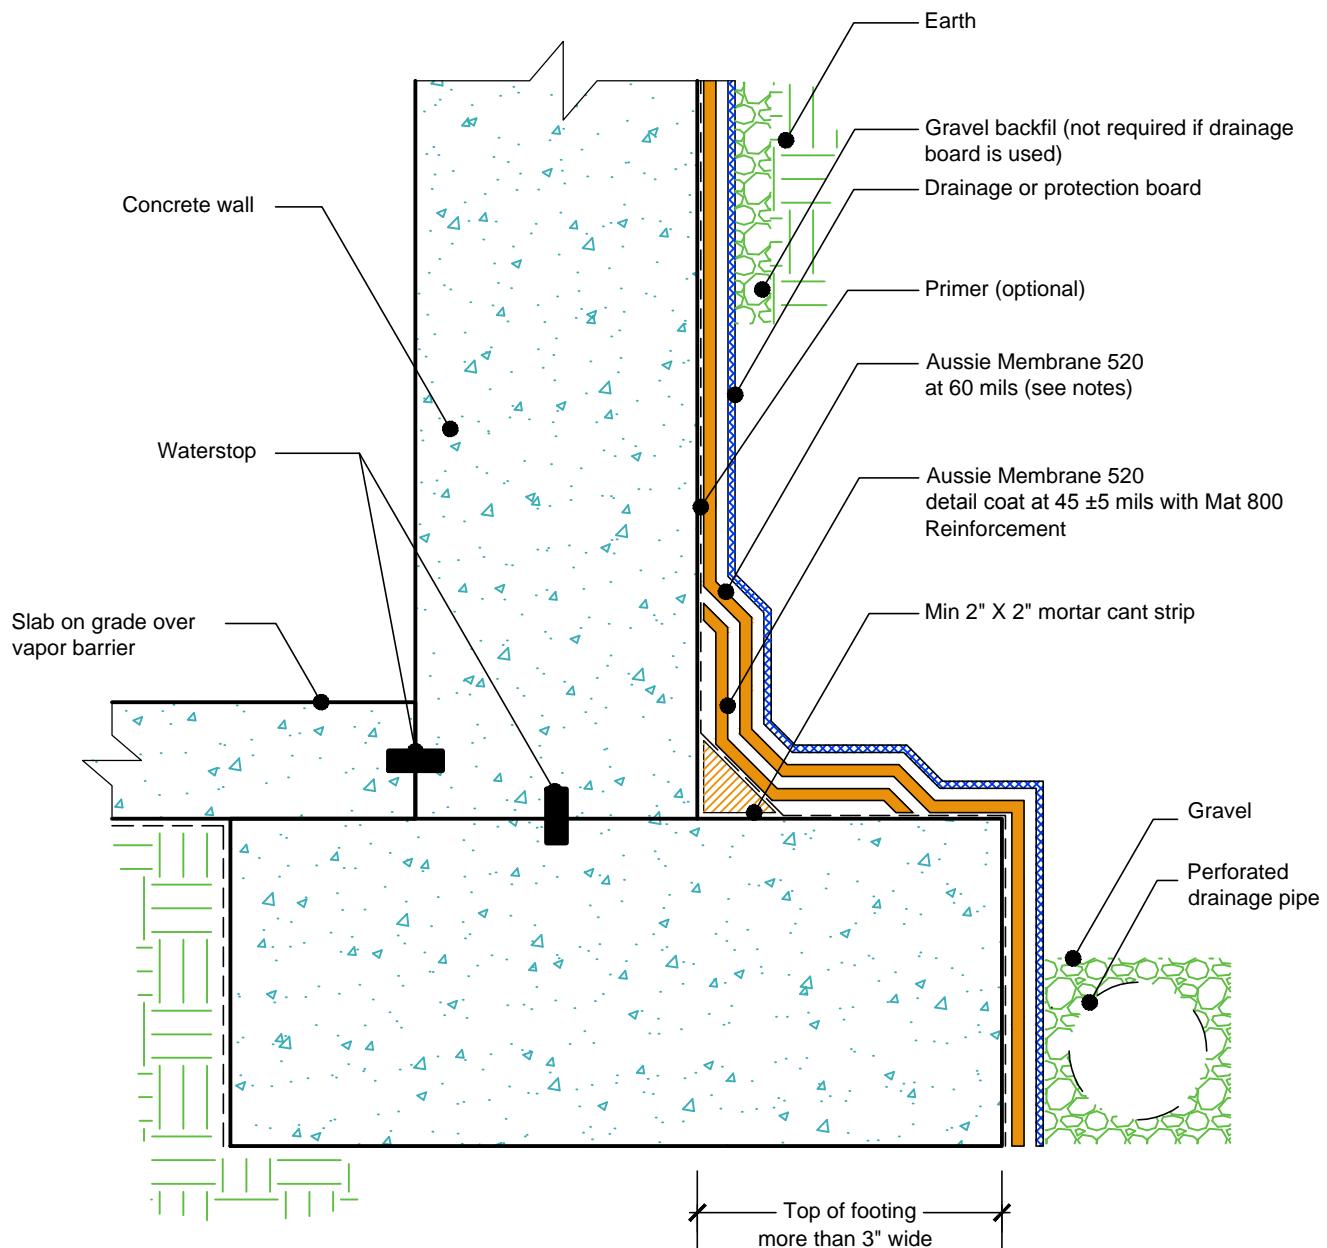

NOTES:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. AVM's "Bottom Drain 12" may be accepted in lieu of the perforated drainage pipe (French Drain). Check local building codes for approval.
5. Exposed top of footing is More than 3"
6. Inside corner (Wall-to-Footing) shown with Water Stop
7. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.
8. Mortar cant strip and detail coat at the cold joint may be replaced with other cold joint details with prior approval from AVM.

DETAIL #:  
AVM-0520-0004-C

AVM SYSTEM 520

AUSSIE MEMBRANE 520

Retaining Walls  
Slab on Grade at Top of Footing  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

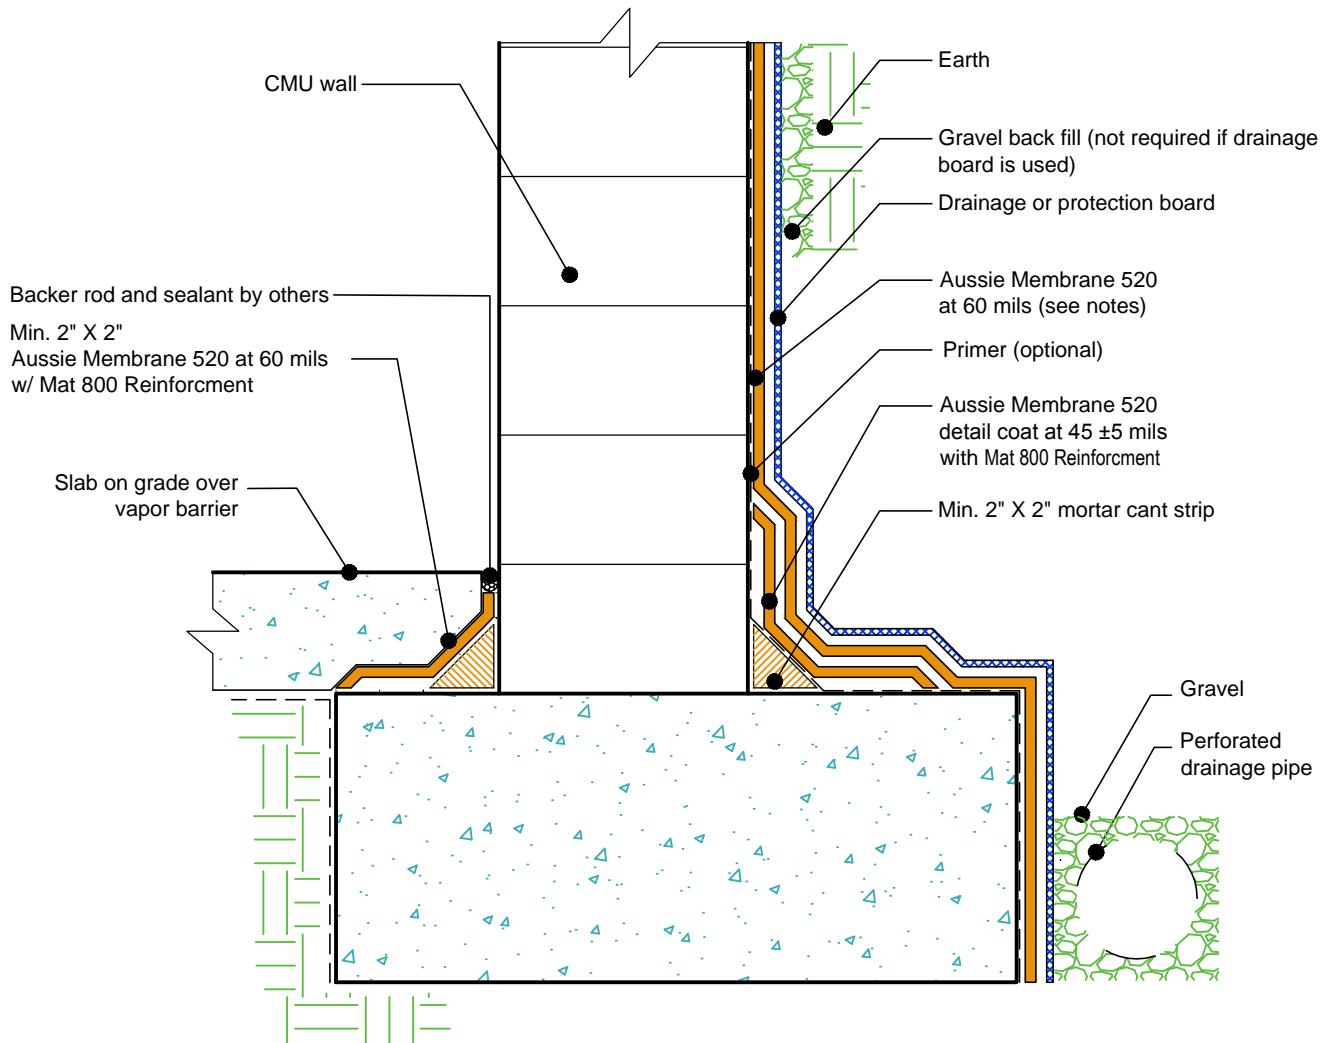


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. AVM's "Bottom Drain 12" may be accepted in lieu of the perforated drainage pipe (French Drain). Check local building codes for approval.
5. Inside corner (Wall-to-Footing) shown with Aussie Membrane 520 corner detail
6. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.
7. Mortar cant strip and detail coat at the cold joint may be replaced with other cold joint details with prior approval from AVM.

DETAIL #:  
AVM-0520-0006-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Retaining Walls  
Slab on Grade at Top of Footing  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

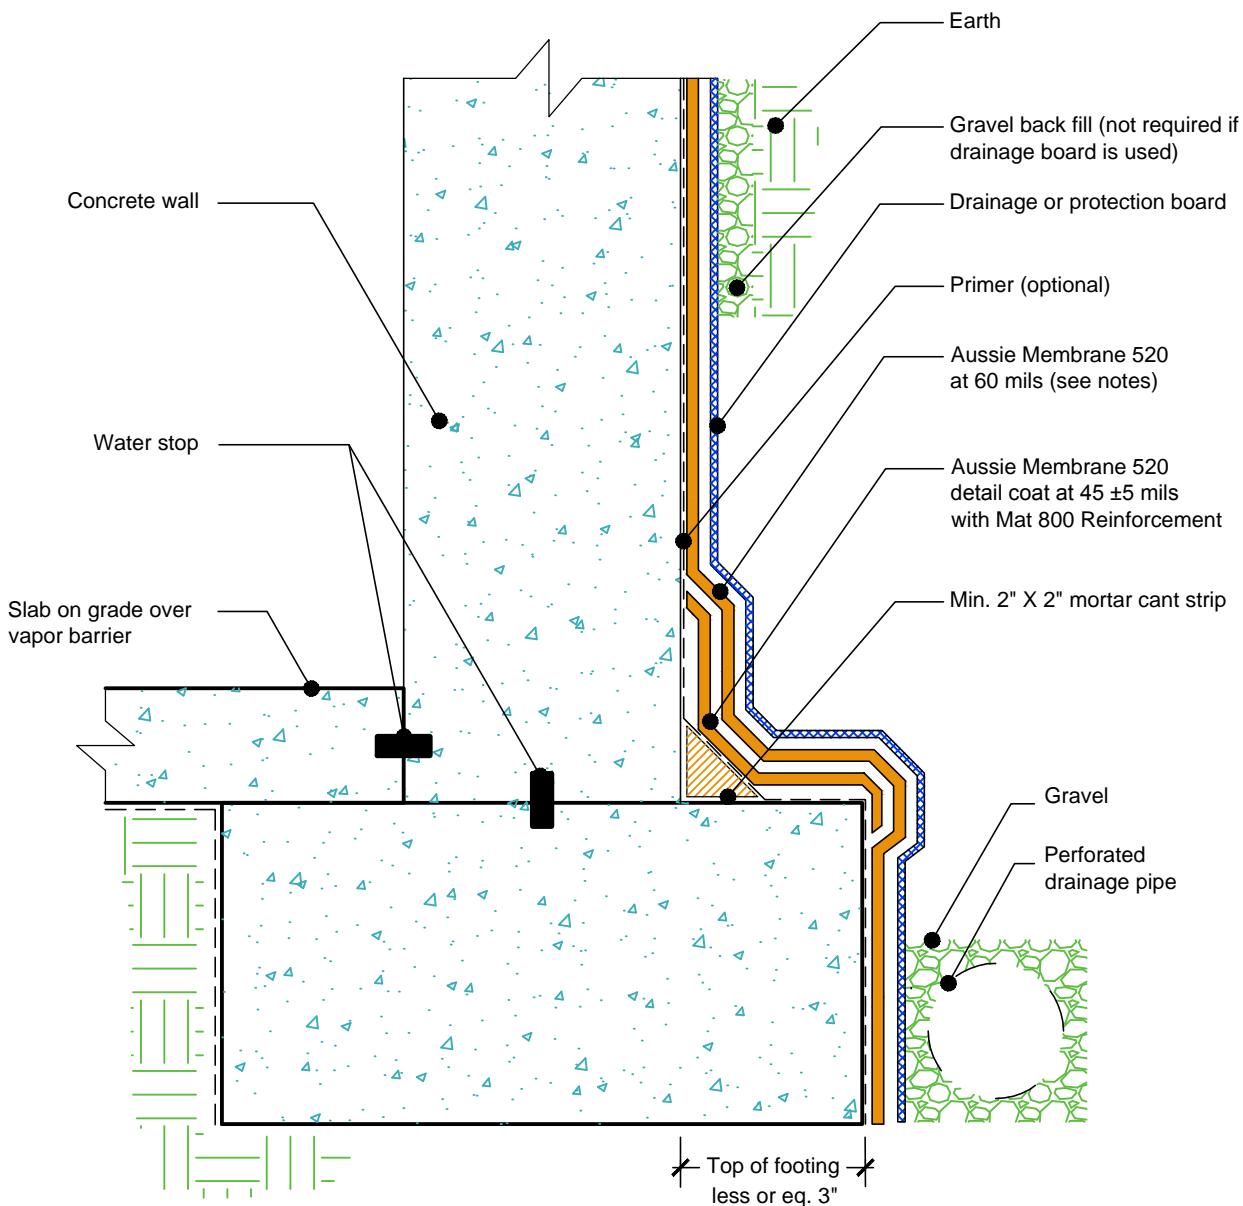

NOTES:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. AVM's "Bottom Drain 12" may be accepted in lieu of the perforated drainage pipe (French Drain). Check local building codes for approval.
5. Exposed top of footing is Less than 3"
6. Inside corner (Wall-to-Footing) shown with Water Stop
7. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.
8. Mortar cant strip and detail coat at the cold joint may be replaced with other cold joint details with prior approval from AVM.

DETAIL #:  
AVM-0520-0008-C

AVM SYSTEM 520

AUSSIE MEMBRANE 520

Retaining Walls  
Elevated Slab on Grade at Top of Footing  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

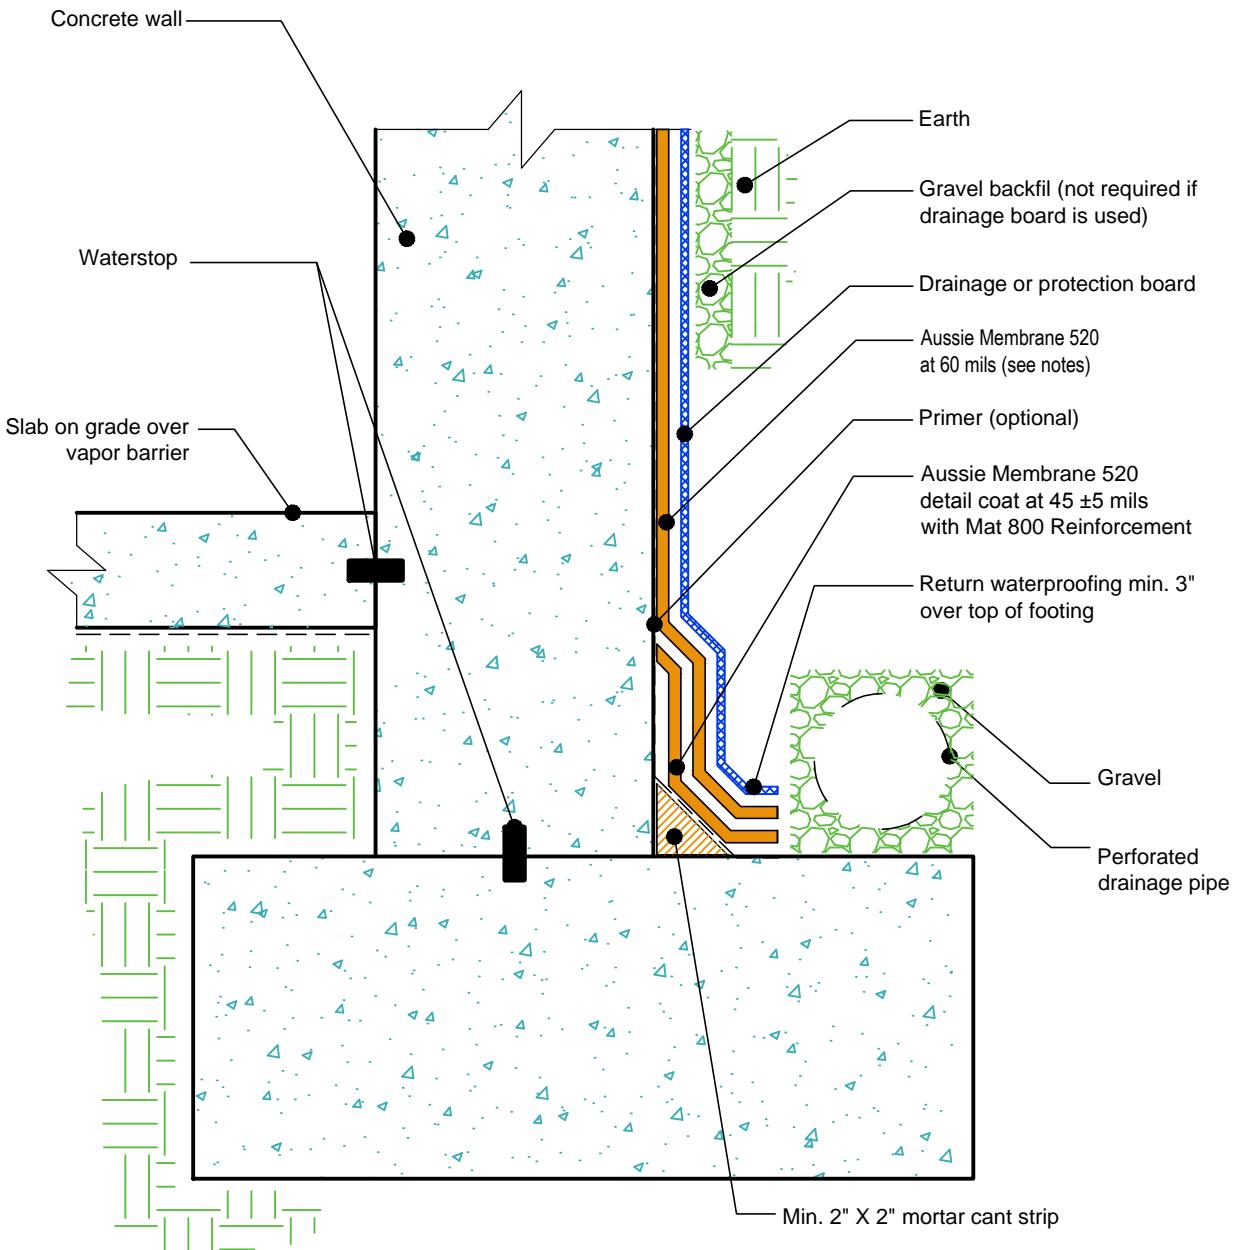


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. AVM's "Bottom Drain 12" may be accepted in lieu of the perforated drainage pipe (French Drain). Check local building codes for approval.
5. Inside corner (Wall-to-Footing) shown with Water Stop
6. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.
7. Mortar cant strip and detail coat at the cold joint may be replaced with other cold joint details with prior approval from AVM.

DETAIL #: AVM-0520-0010-C  
 AVM SYSTEM 520  
 AUSSIE MEMBRANE 520

Retaining Walls  
 Elevated Slab on Grade at Top of Footing  
 AVM AUSSIE MEMBRANE 520  
 Fluid Applied Waterproofing.

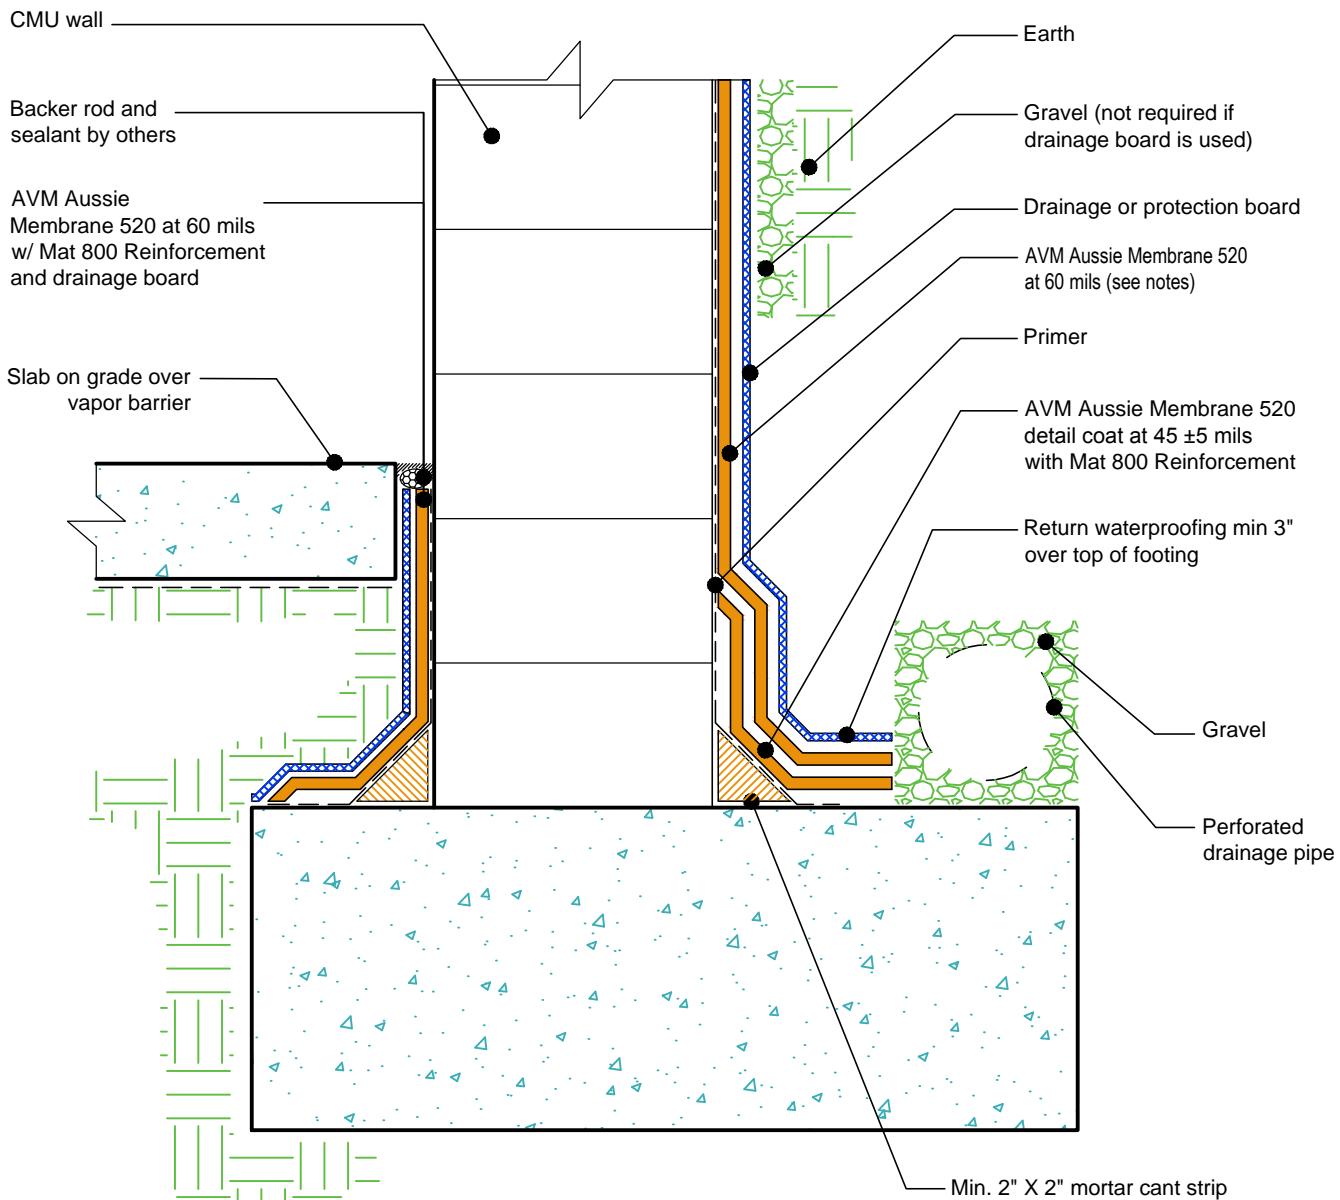


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. AVM's "Bottom Drain 12" may be accepted in lieu of the perforated drainage pipe (French Drain). Check local building codes for approval.
5. Inside corner (Wall-to-Footing) shown with Aussie Membrane 520 corner detail
6. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.
7. Mortar cant strip and detail coat at the cold joint may be replaced with other cold joint details with prior approval from AVM.

DETAIL #:  
AVM-0520-1502-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Planter Basic Detail  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

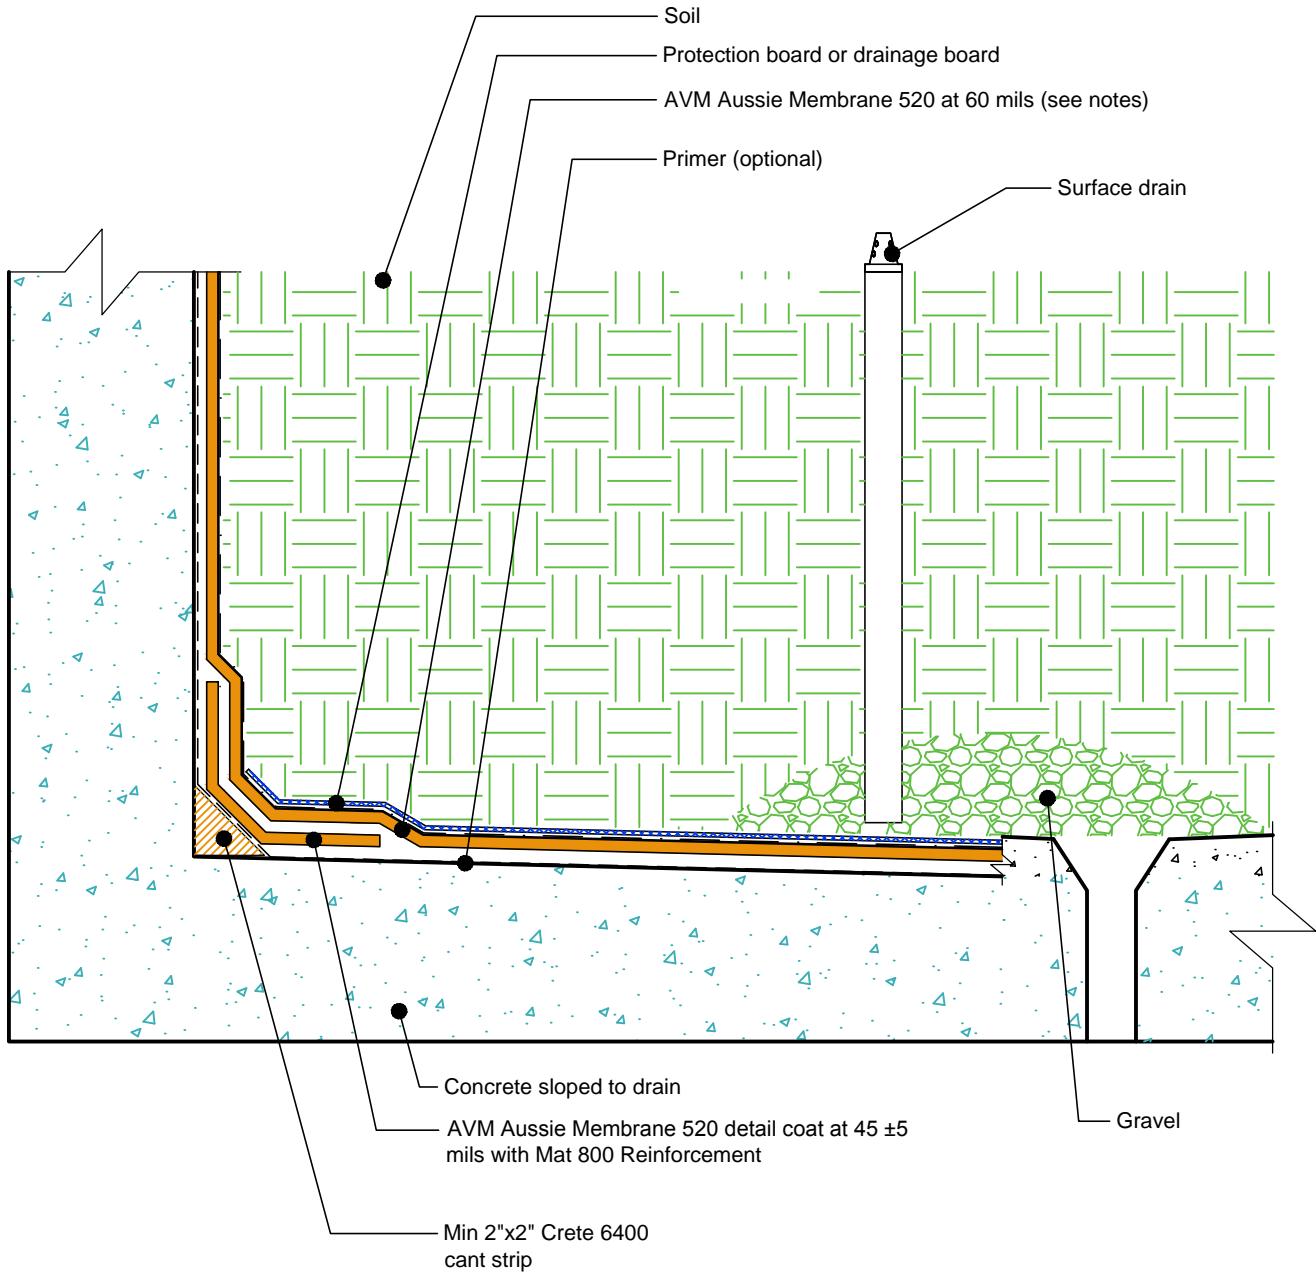


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table".
3. Contact AVM if no drain board or protection board is specified.
4. Planters must have sufficient slope, sufficient drains and proper drainage systems to effectively evacuate excessive water.
5. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.
6. Mortar cant strip and detail coat at the cold joint may be replaced with other cold joint details with prior approval from AVM.

DETAIL #:  
AVM-0520-2001-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Topping on Slab on Concrete Substrate  
over AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

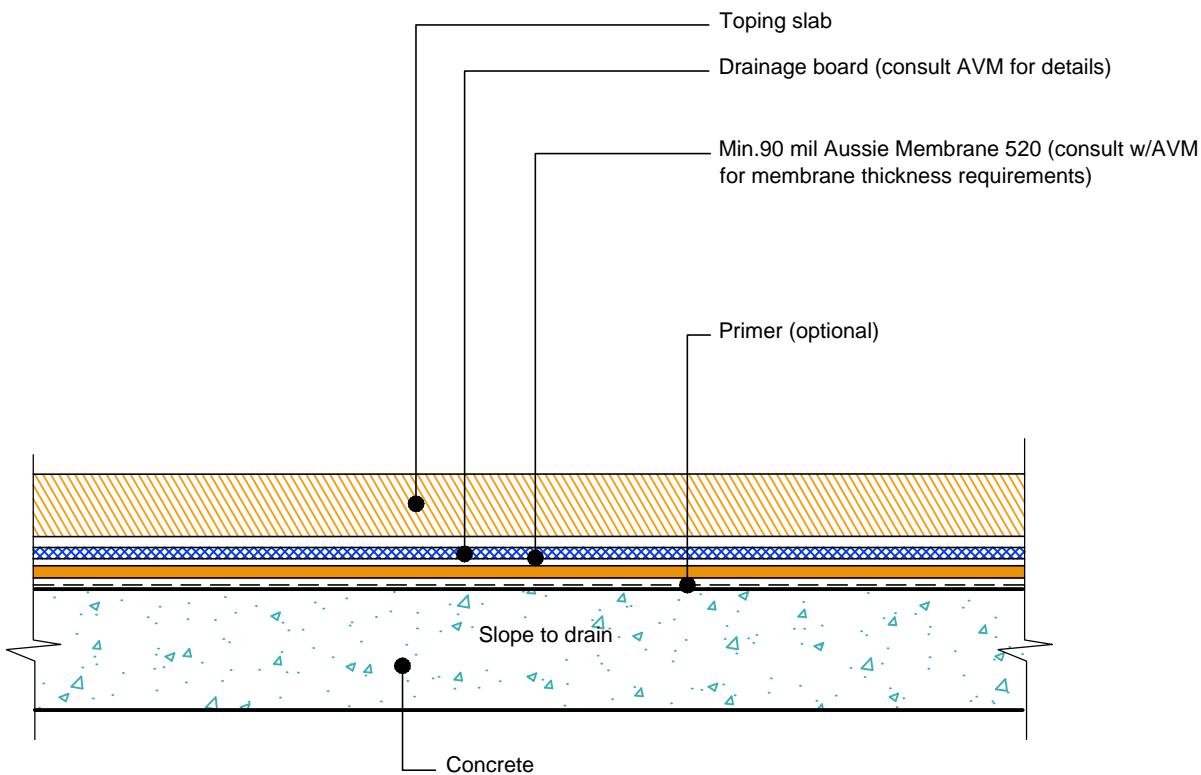


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. For drainage and protection on topping Slabs up to 4" thick for pedestrian applications, use AVM Drain Board 6000.
5. For drainage and protection on topping slabs over 4" thick or for vehicular applications, use AVM Drain Board 9000.

DETAIL #:  
AVM-0520-2002-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Topping Slab on Concrete Substrate  
over AVM AUSSIE MEMBRANE 520  
with Drain Board, Fluid Applied  
Waterproofing (Heavy Duty).

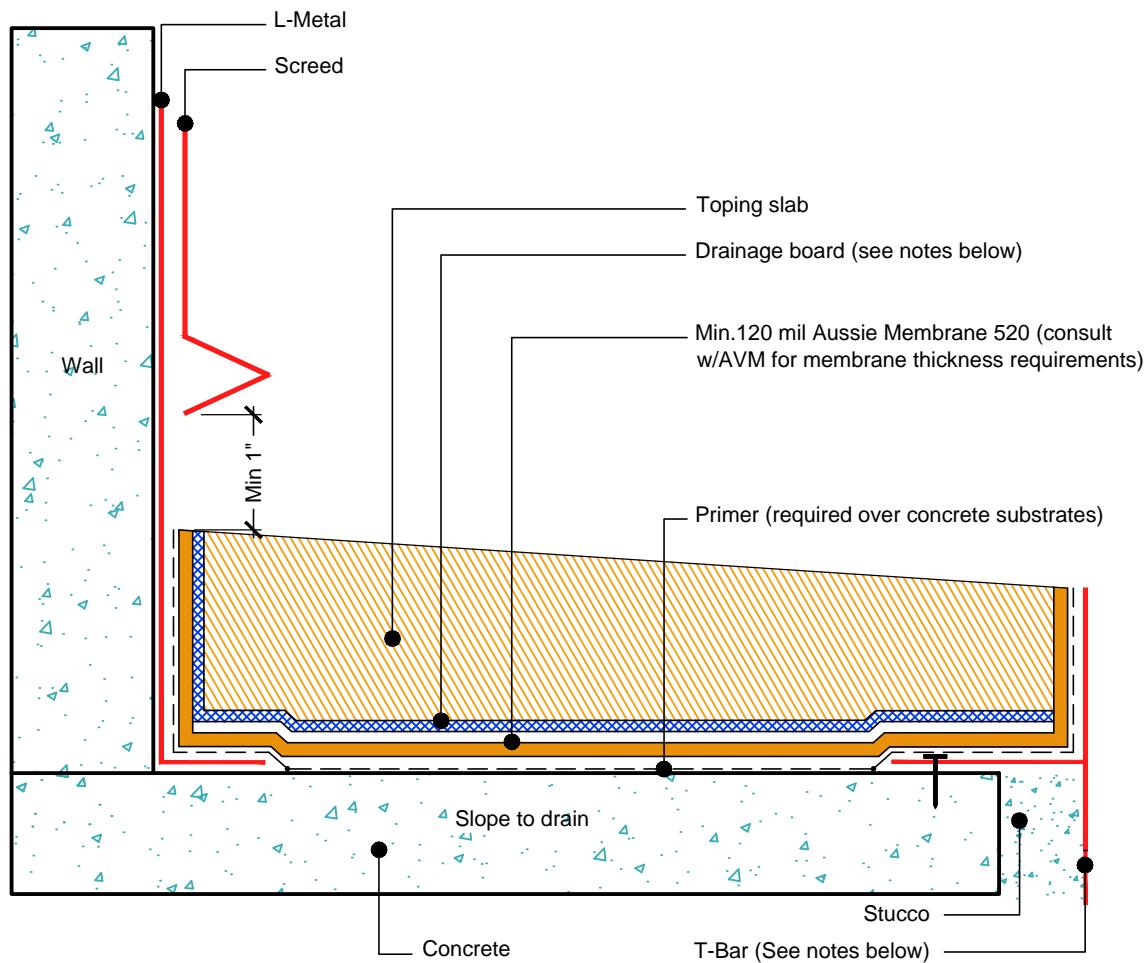

NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table".
3. Contact AVM if no drain board or protection board is specified.
4. For drainage and protection on topping Slabs up to 4" thick for pedestrian applications, use AVM Drain Board 6000.
5. For drainage and protection on topping slabs over 4" thick or for vehicular applications, use AVM Drain Board 9000.
6. This assembly is for pedestrian traffic use only. For vehicular applications and other heavy loads, contact AVM for approval.
7. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.
8. Mortar cant strip and detail coat at the cold joint may be replaced with other cold joint details with prior approval from AVM.
9. Many edge details are possible. All must allow for proper water evacuation. (None should trap water) Consult AVM for details.

AVM Industries, Inc.

8245 Remmet Ave, Canoga Park, CA 91304


Quality Waterproofing Products

888.414.1041 818.888.0050

[www.avmindustries.com](http://www.avmindustries.com)

DETAIL #:  
AVM-0520-2022-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Topping Slab on Concrete Substrate  
over AVM AUSSIE MEMBRANE 520  
with Drain Board, Fluid Applied  
Waterproofing (Medium Duty).

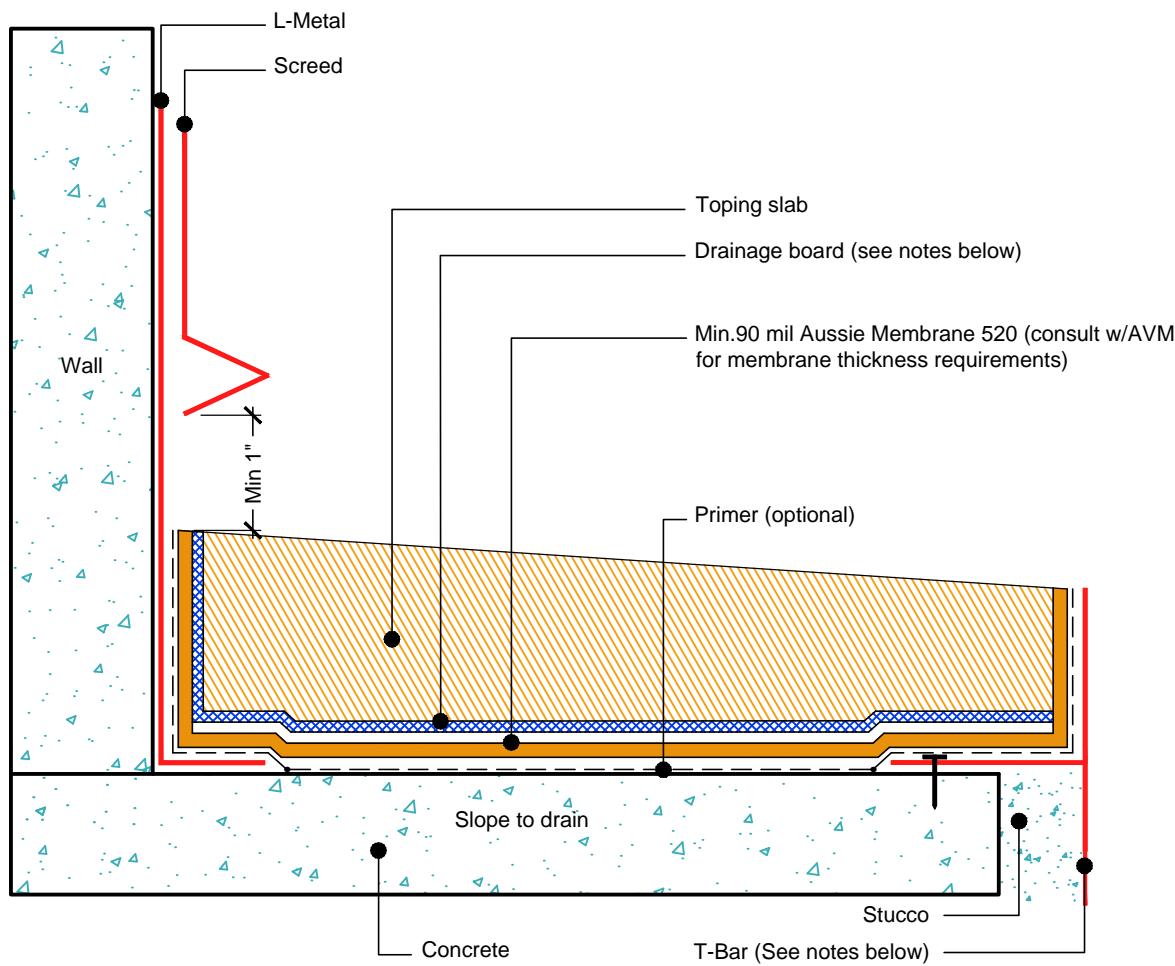


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. For drainage and protection on topping Slabs up to 4" thick for pedestrian applications, use AVM Drain Board 6000.
5. For drainage and protection on topping slabs over 4" thick or for vehicular applications, use AVM Drain Board 9000.
6. This assembly is for pedestrian traffic use only. For vehicular applications and other heavy loads, contact AVM for approval.
7. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.
8. Mortar cant strip and detail coat at the cold joint may be replaced with other cold joint details with prior approval from AVM.
9. Many edge details are possible. All must allow for proper water evacuation. (None should trap water) Consult AVM for details.

DETAIL #:  
AVM-0520-2042-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Topping Slab on Concrete Substrate  
over AVM AUSSIE MEMBRANE 520  
with Drainage Fabric, Fluid Applied  
Waterproofing (Light Duty).

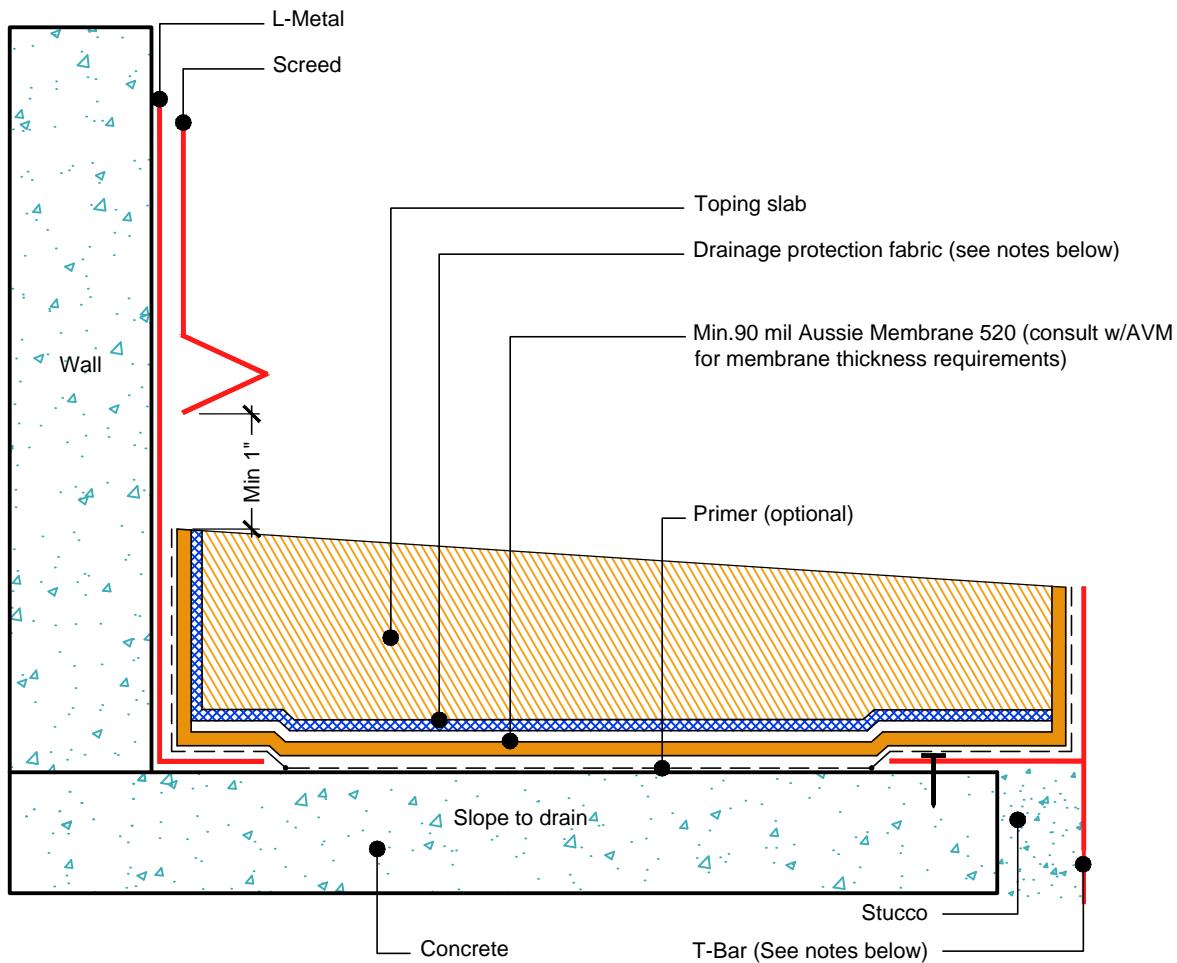


NOTES:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. For drainage/protection, use AVM Drainage & Protection Fabric DPF-16. For topping slabs over 4" thick or vehicular applications, use AVM Drain Board 9000.
5. This assembly is for pedestrian traffic use only. For vehicular applications and other heavy loads, contact AVM for approval.
6. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.
7. Many edge details are possible. All must allow for proper water evacuation. (None should trap water) Consult AVM for details.

DETAIL #:  
AVM-0520-2072-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520


Other Edge and Drain Details Topping Slabs  
Waterproofing on Concrete Substrates  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing. (Heavy Duty)

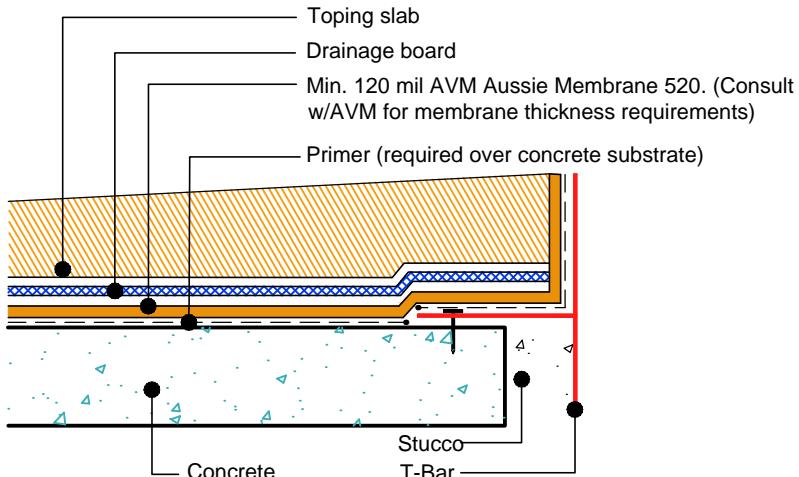

Slope Away from Edge Detail with Edge Metals  
Heavy Duty

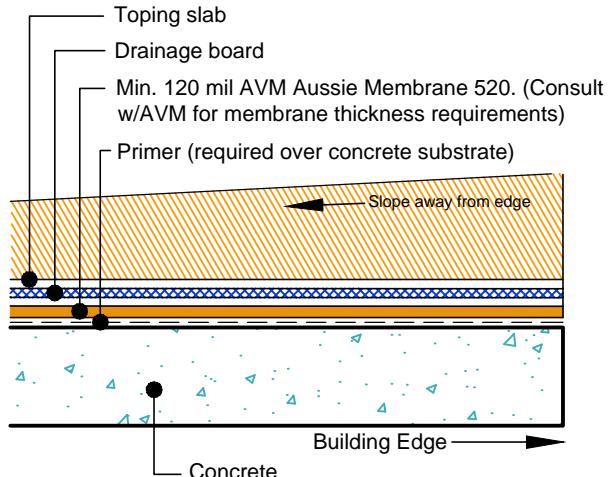

Slope Away from Edge Detail without Edge Metals  
Heavy Duty

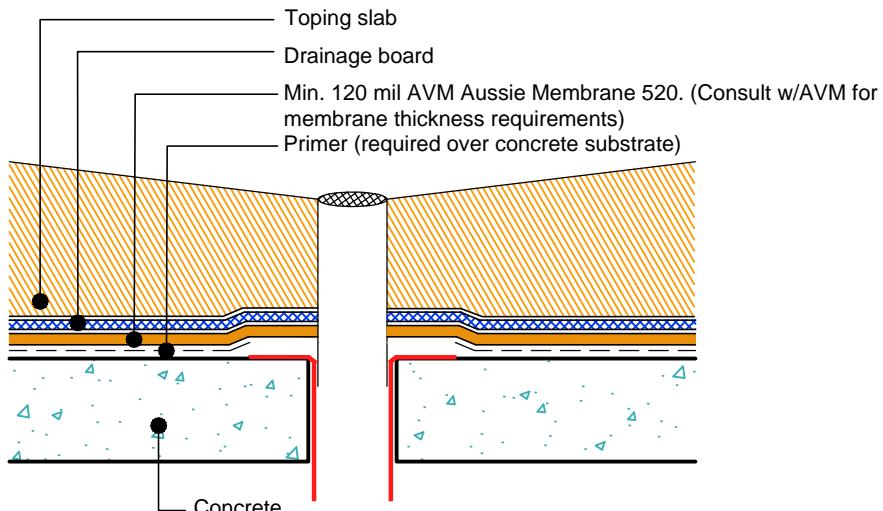


Drain Detail on Concrete  
Heavy Duty

NOTES:


1. See drawing and notes on detail number AVM-520-2002-C for more information.
2. If water is to drain away from the edge into area floor drains, then edge metals do not require weep holes.
3. Reinforce the Aussie Membrane with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.
4. A 2-part concrete drain with a bowl and a flange and built-in weep holes should be used. (Consult AVM for proper drain selection)

DETAIL #:  
AVM-0520-2074-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520


Other Edge and Drain Details Topping Slabs  
Waterproofing on Concrete Substrates  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing. (Medium Duty)

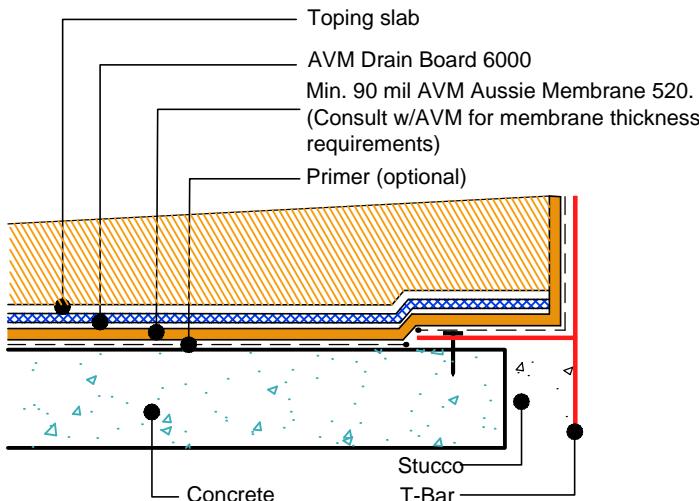

Slope Away from Edge Detail with Edge Metals  
Medium Duty

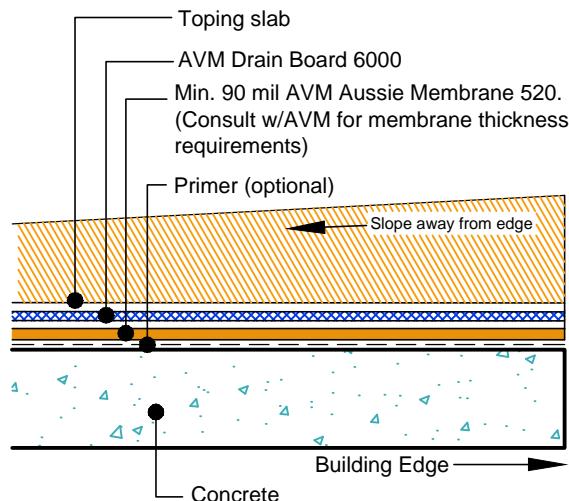

Slope Away from Edge Detail without Edge Metals  
Medium Duty

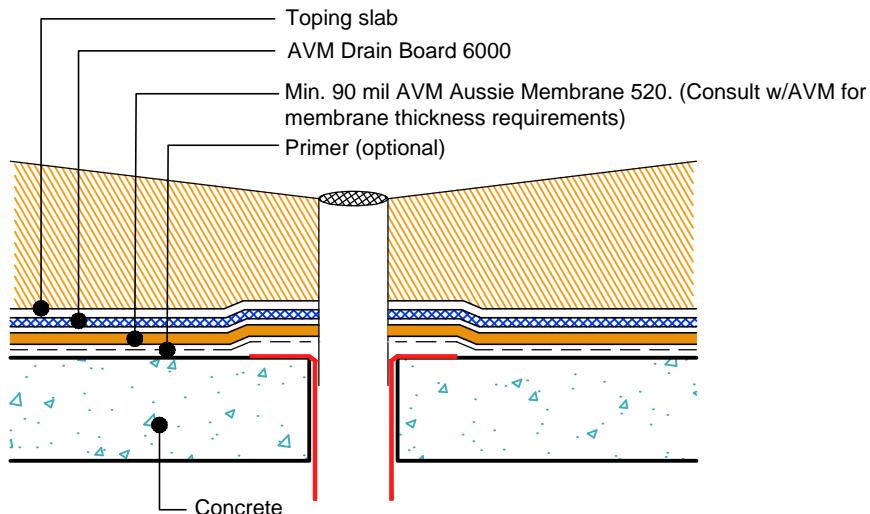


Drain Detail on Concrete  
Medium Duty

NOTES:

1. See drawing and notes on detail number AVM-520-2022-C for more information.
2. If water is to drain away from the edge into area floor drains, then edge metals do not require weep holes.
3. Reinforce the Aussie Membrane with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.
4. A 2-part concrete drain with a bowl and a flange and built-in weep holes should be used. (Consult AVM for proper drain selection)

DETAIL #: AVM-0520-2502-P  
 AVM SYSTEM 520  
 AUSSIE MEMBRANE 520

Topping Slab on Plywood Substrate over  
 AVM AUSSIE MEMBRANE 520  
 with Drain Board & Thin Crete Base, Fluid  
 Applied Waterproofing (Heavy Duty)  
 Concrete under Metals

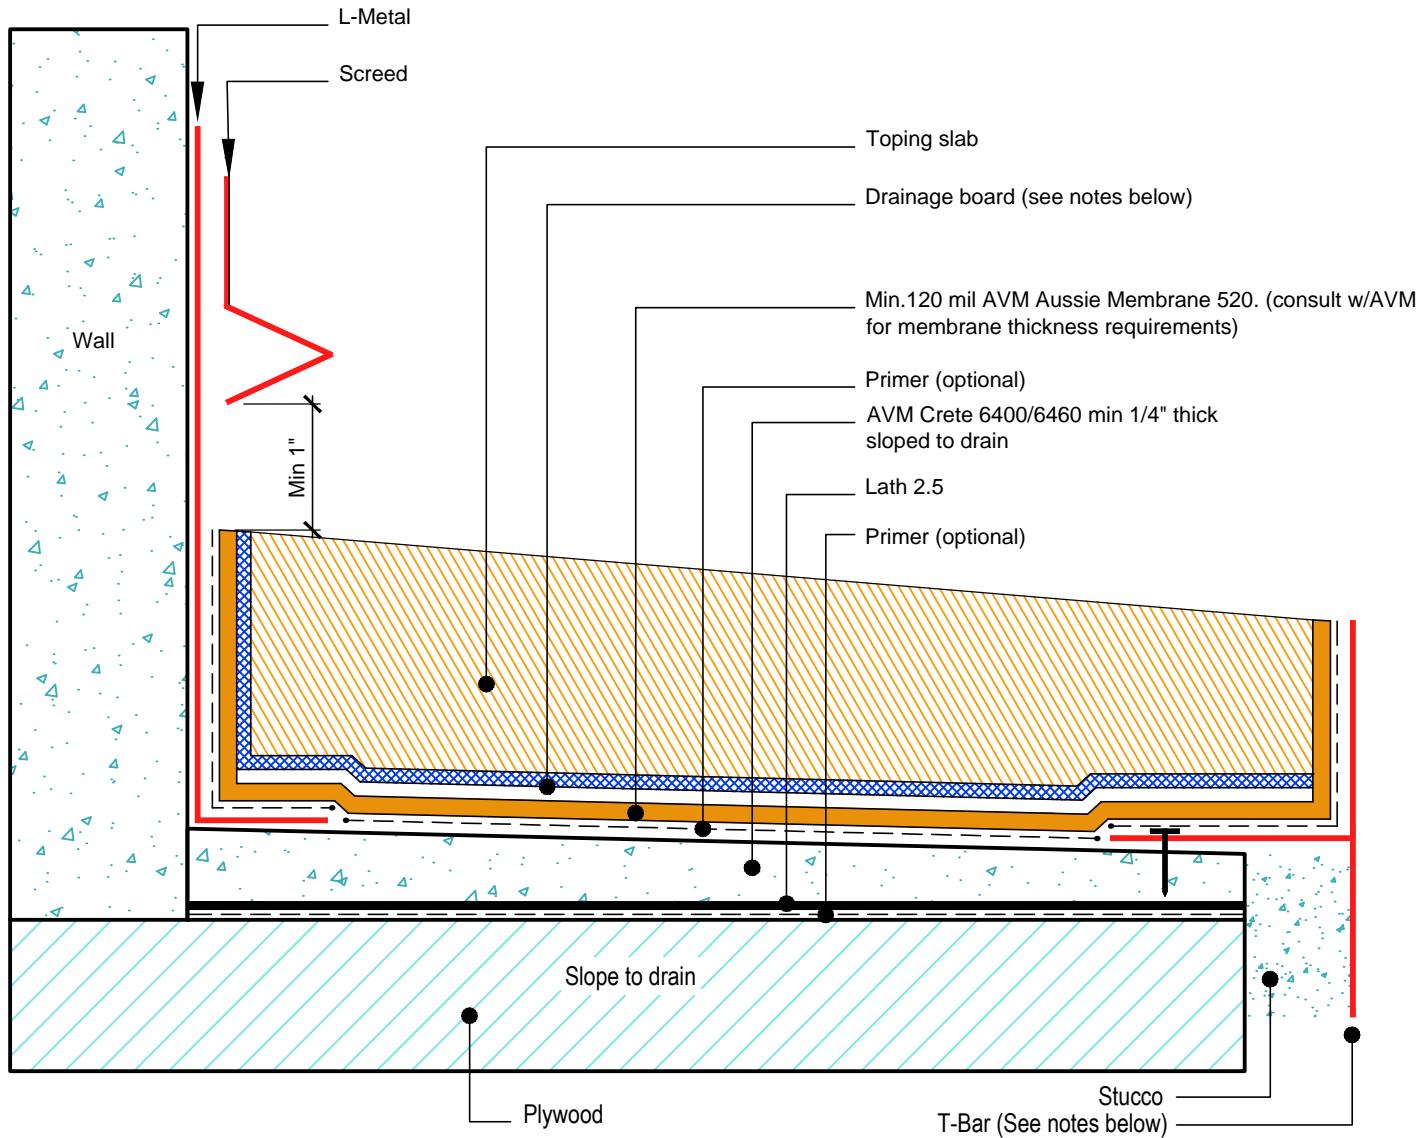


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. Crete 6400/6460. Refer to the Crete 6400 or Crete 6460 Technical Data Sheets or Installation Instructions for more info.
5. For drainage and protection on topping Slabs up to 4" thick for pedestrian applications, use AVM Drain Board 6000.
6. For drainage and protection on topping slabs over 4" thick or for vehicular applications, use AVM Drain Board 9000.
7. This assembly is for pedestrian traffic use only. For vehicular applications and other heavy loads, contact AVM for approval.
8. Substrates must be sloped to drains and/or edges before membrane installation. (Min 1/4" per foot)
9. If water is to drain over the edge, then edge metals MUST have sufficient weep holes (at least every 6") and must be strong enough (thick enough) to act as a concrete form.
10. Many edge details are possible. All must allow for proper water evacuation. (None should trap water) Consult AVM for details.
11. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.

DETAIL #: AVM-0520-2504-P  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Topping Slab on Plywood Substrate over  
AVM AUSSIE MEMBRANE 520  
with Drain Board & Thin Crete Base, Fluid  
Applied Waterproofing (Heavy Duty)  
Concrete over Metals

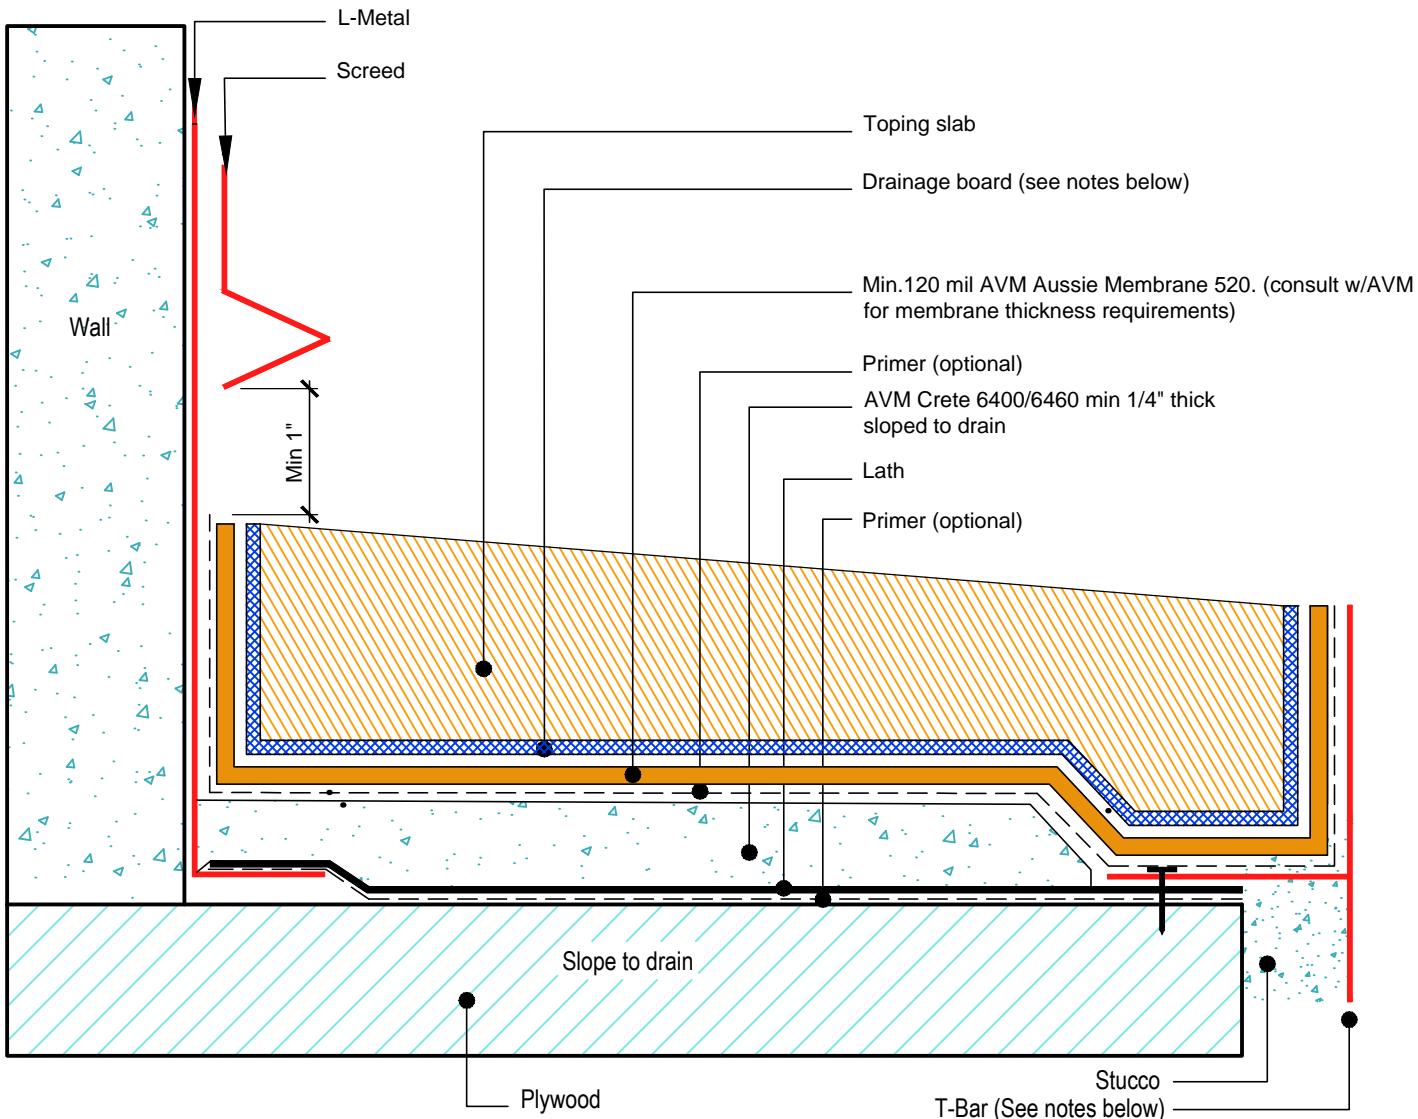


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. Crete 6400/6460. Refer to the Crete 6400 or Crete 6460 Technical Data Sheets or Installation Instructions for more info.
5. For drainage and protection on topping Slabs up to 4" thick for pedestrian applications, use AVM Drain Board 6000.
6. For drainage and protection on topping slabs over 4" thick or for vehicular applications, use AVM Drain Board 9000.
7. This assembly is for pedestrian traffic use only. For vehicular applications and other heavy loads, contact AVM for approval.
8. Substrates must be sloped to drains and/or edges before membrane installation. (Min 1/4" per foot)
9. If water is to drain over the edge, then edge metals MUST have sufficient weep holes (at least every 6") and must be strong enough (thick enough) to act as a concrete form.
10. Many edge details are possible. All must allow for proper water evacuation. (None should trap water) Consult AVM for details.
11. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.

DETAIL #: AVM-0520-2522-P  
 AVM SYSTEM 520  
 AUSSIE MEMBRANE 520

Topping Slab on Plywood Substrate over  
 AVM AUSSIE MEMBRANE 520  
 with Drain Board, Fluid Applied  
 Waterproofing (Medium Duty)

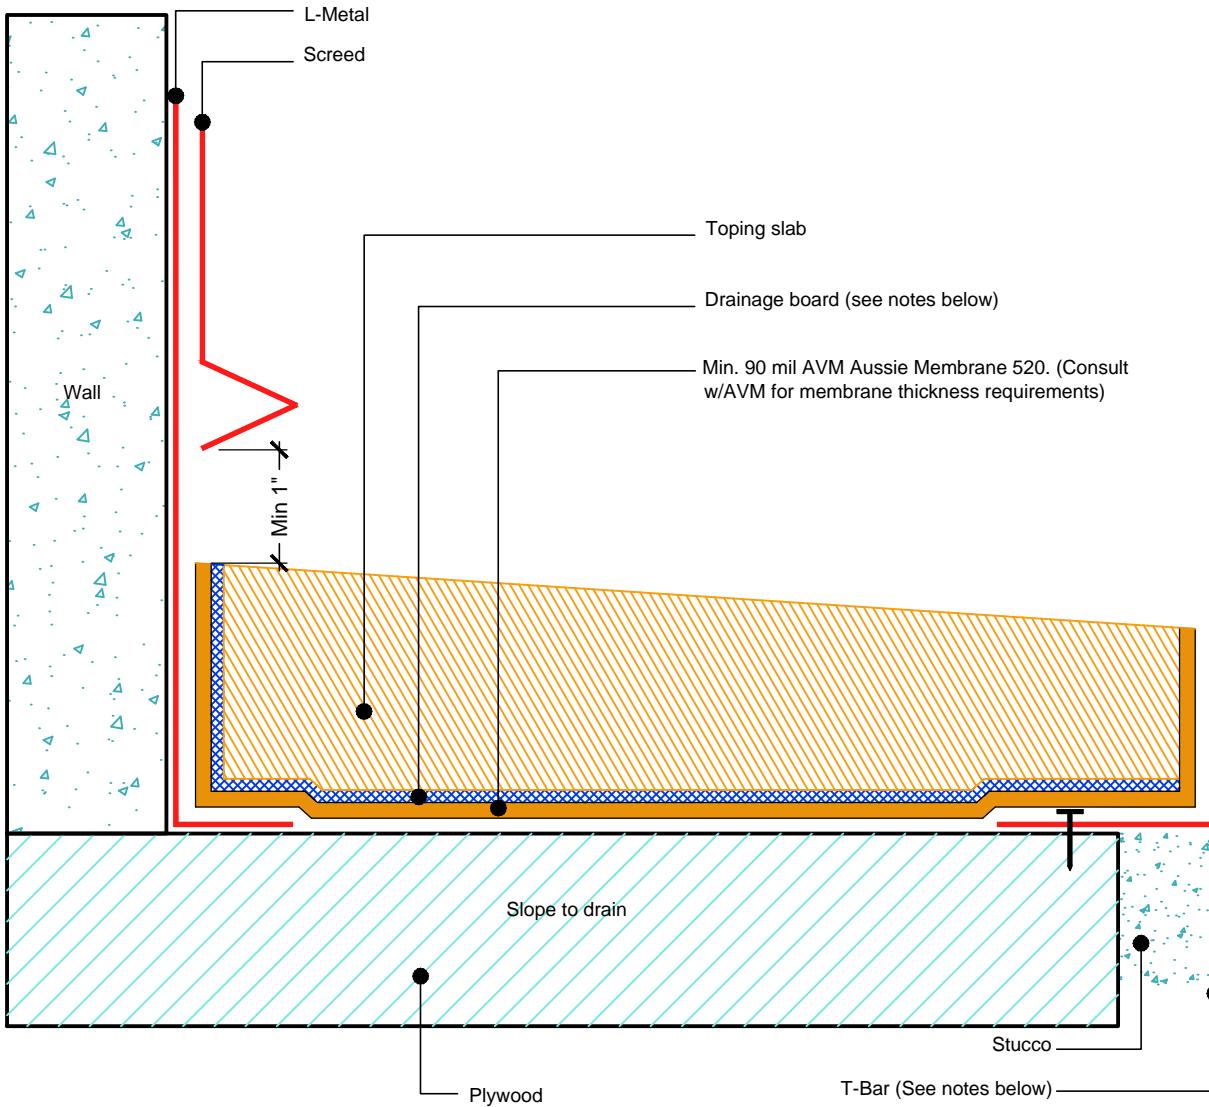


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. For drainage and protection on topping Slabs up to 4" thick for pedestrian applications, use AVM Drain Board 6000.
5. For drainage and protection on topping slabs over 4" thick or for vehicular applications, use AVM Drain Board 9000.
6. This assembly is for pedestrian traffic use only. For vehicular applications and other heavy loads, contact AVM for approval.
7. Substrates must be sloped to drains and/or edges before membrane installation. (Min 1/4" per foot)
8. If water is to drain over the edge, then edge metals MUST have sufficient weep holes (at least every 6") and must be strong enough (thick enough) to act as a concrete form.
9. Many edge details are possible. All must allow for proper water evacuation. (None should trap water) Consult AVM for details.
10. Make sure all nails are flush with the plywood surface or slightly sunken in below it. (Nails protruding above the plywood surface may puncture the membrane)
11. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all plywood joints, corners, metal transitions, penetrations, drains, etc.

DETAIL #: AVM-0520-2542-P  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Topping Slab on Plywood Substrate  
over AVM AUSSIE MEMBRANE 520  
with Drain Fabric, Fluid Applied  
Waterproofing (Light Duty)

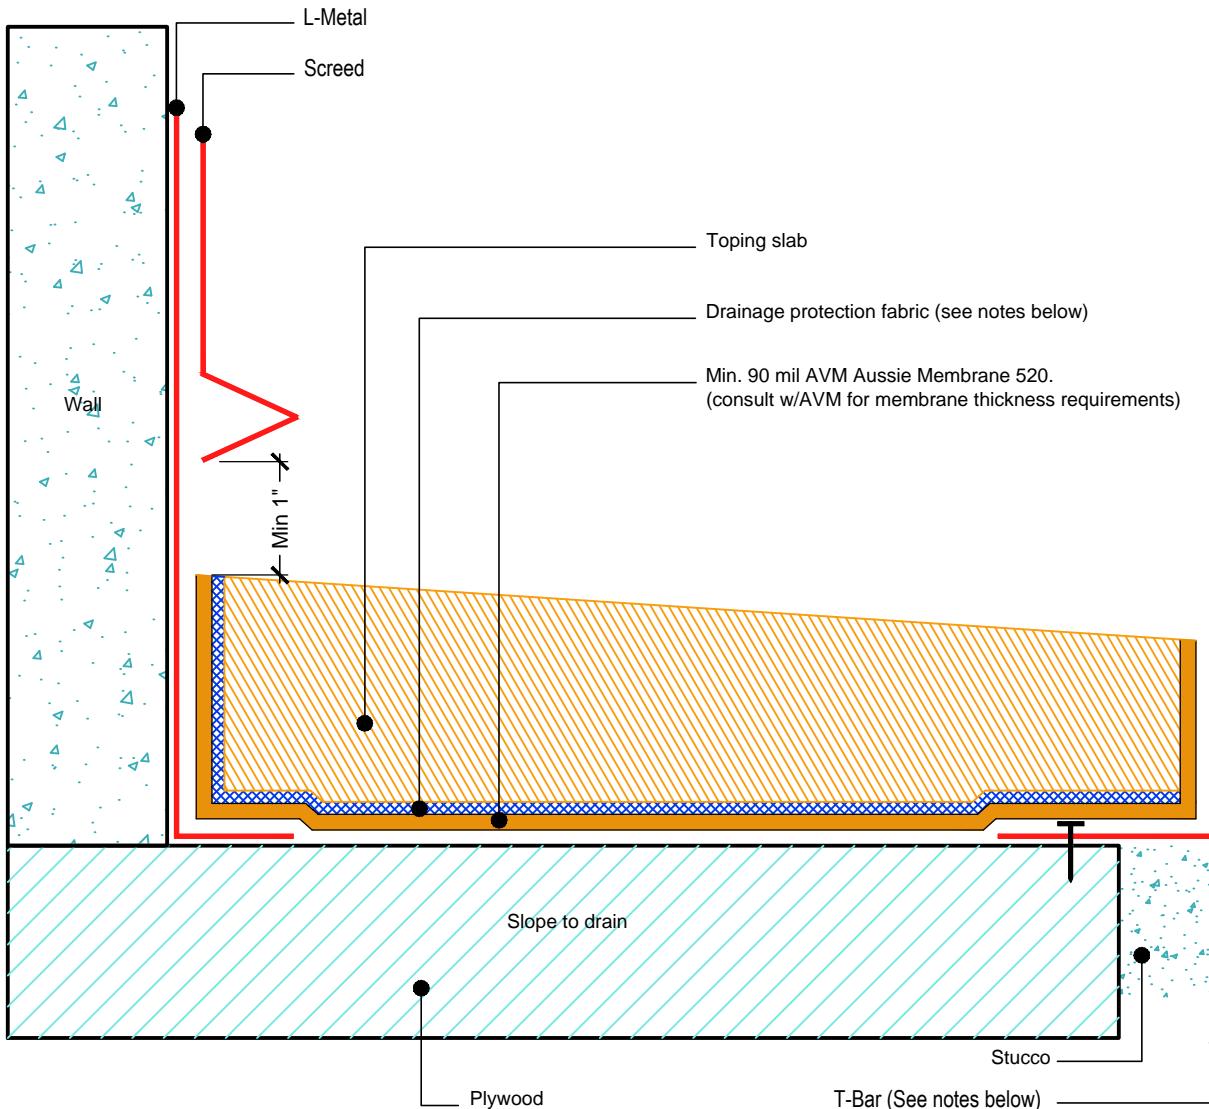


NOTES:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. For drainage/protection, use AVM Drainage & Protection Fabric DPF-16. For topping slabs over 4" thick or vehicular applications, use AVM Drain Board 9000.
5. This assembly is for pedestrian traffic use only. For vehicular applications and other heavy loads, contact AVM for approval.
6. Substrates must be sloped to drains and/or edges before membrane installation. (Min 1/4" per foot)
7. If water is to drain over the edge, then edge metals MUST have sufficient weep holes (at least every 6") and must be strong enough (thick enough) to act
8. Many edge details are possible. All must allow for proper water evacuation. (None should trap water) Consult AVM for details.
9. Make sure all nails are flush with the plywood surface or slightly sunken in below it. (Nails protruding above the plywood surface may puncture the membrane)
10. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all plywood joints, corners, metal transitions, penetrations, drains, etc.

DETAIL #: AVM-0520-2572-P  
 AVM SYSTEM 520  
 AUSSIE MEMBRANE 520


Other Edge and Drain Details Topping Slabs  
 Waterproofing on Plywood Substrates  
 AVM AUSSIE MEMBRANE 520  
 Fluid Applied Waterproofing (Heavy Duty)

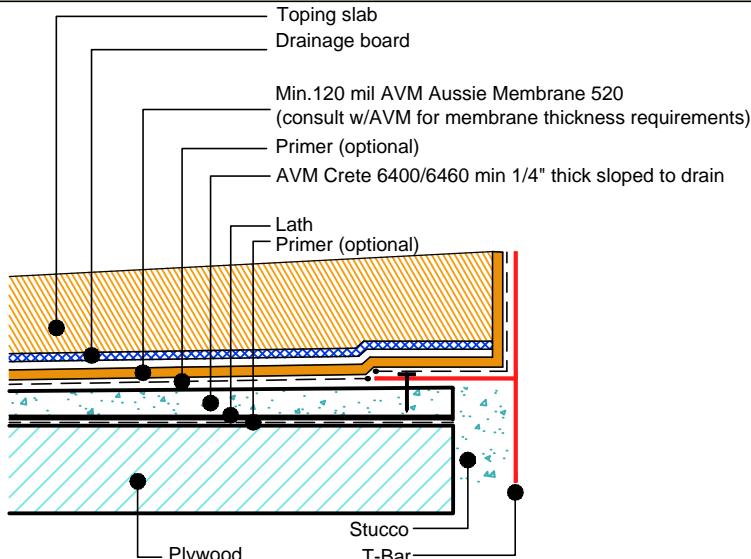


Slope Away from Edge Detail  
Concrete Under Metals

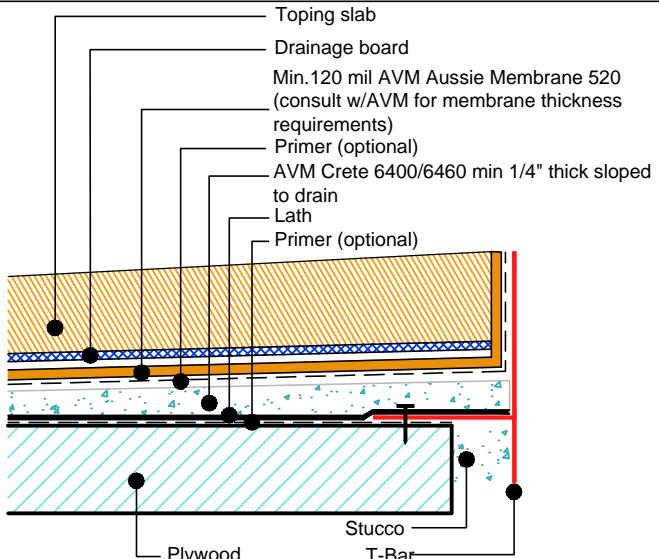

Slope Away from Edge Detail  
Concrete Over Metals

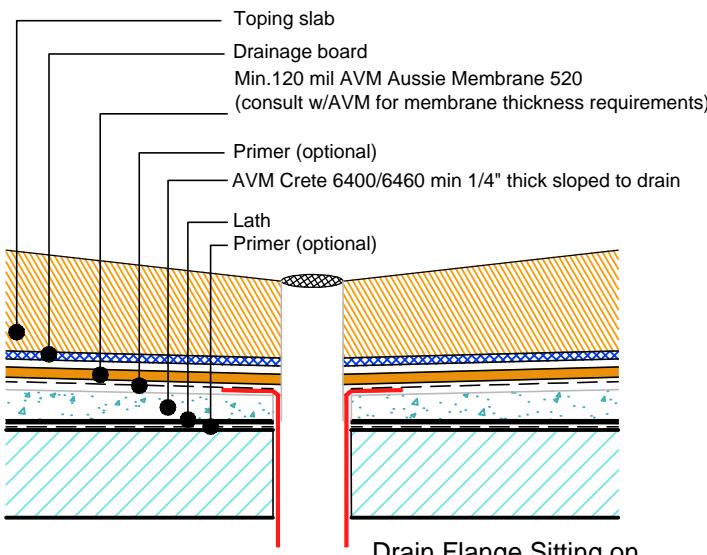

Drain Flange Sitting on  
Crete 6400/6460

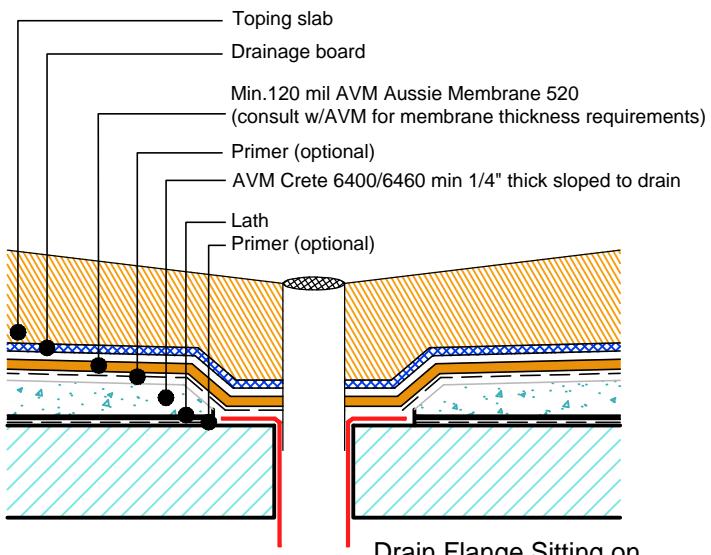


Drain Flange Sitting on  
Plywood Substrate

NOTES:


1. See drawing and notes on detail number AVM-520-2502-P for more information.
2. If water is to drain away from the edge into area floor drains, then edge metals do not require weep holes.
3. Reinforce the Aussie Membrane with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.

DETAIL #: AVM-0520-2574-P  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520


Other Edge and Drain Details Topping  
Slabs Waterproofing on Plywood  
Substrates.  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing (Medium  
and Light Duty)

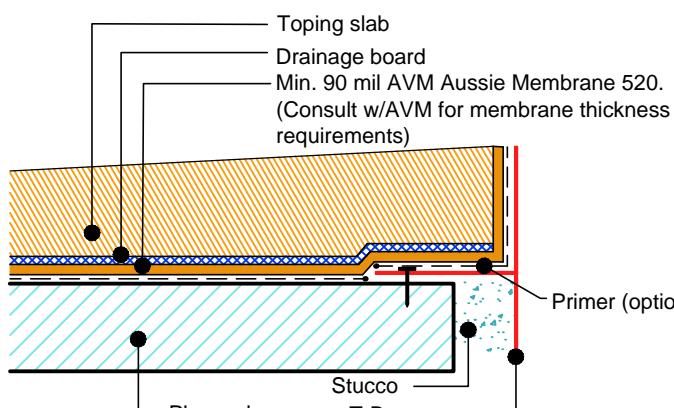


Slope Away from Edge Detail  
Medium Duty

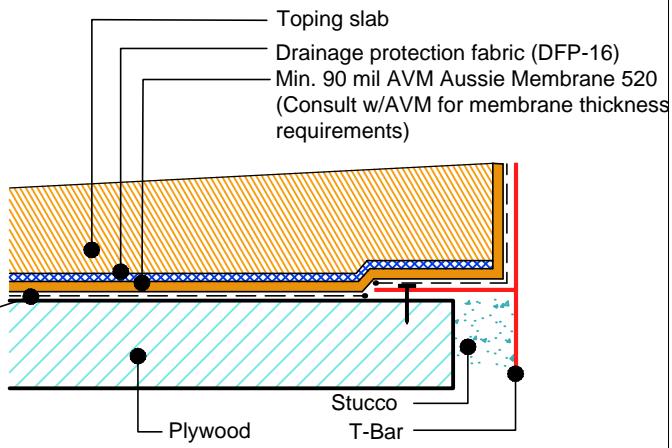

Slope Away from Edge Detail  
Light Duty

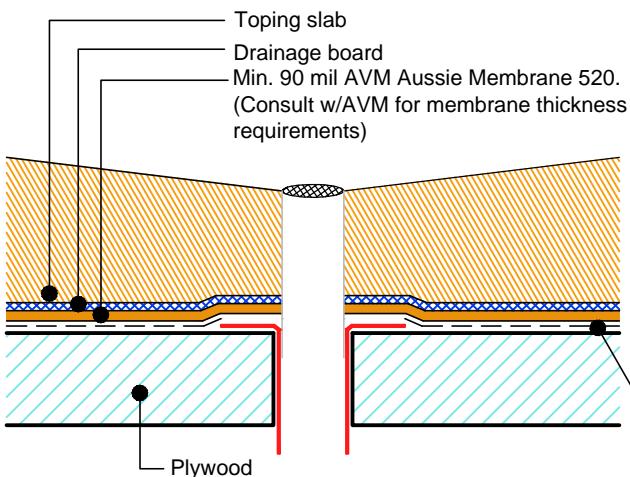

Drain Flange Sitting on Plywood  
Medium Duty

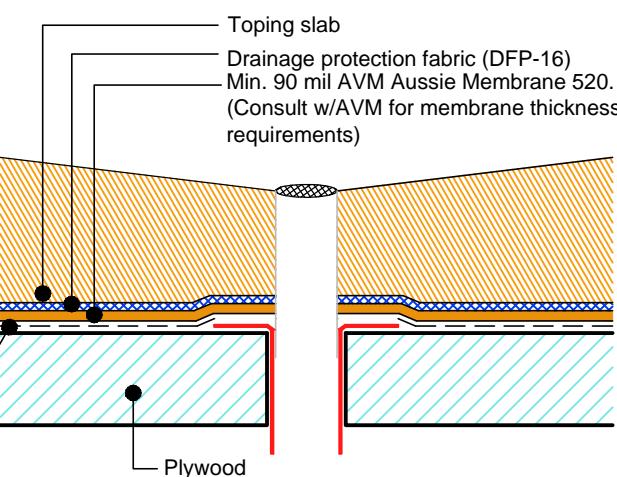

Drain Flange Sitting on Plywood  
Light Duty

NOTES:

1. See drawing and notes on detail number AVM-520-2522-P for more information on medium duty applications.
2. See drawing and notes on detail number AVM-520-2542-P for more information on light duty applications.
3. If water is to drain away from the edge into area floor drains, then edge metals do not require weep holes.
4. Reinforce the Aussie Membrane with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.


DETAIL #: AVM-0520-2580-P  
 AVM SYSTEM 520  
 AUSSIE MEMBRANE 520

Plywood Joint Detail for Topping Slabs  
 Waterproofing on Plywood Substrates  
 AVM AUSSIE MEMBRANE 520  
 Fluid Applied Waterproofing.



AVM Aussie Membrane 520 detail coat at 45±5 mils with Mat 800 Reinforcement

Aussie Membrane 520  
 AVM Mat 800 Reinforcement  
 Aussie Membrane 520  
 Primer (optional)

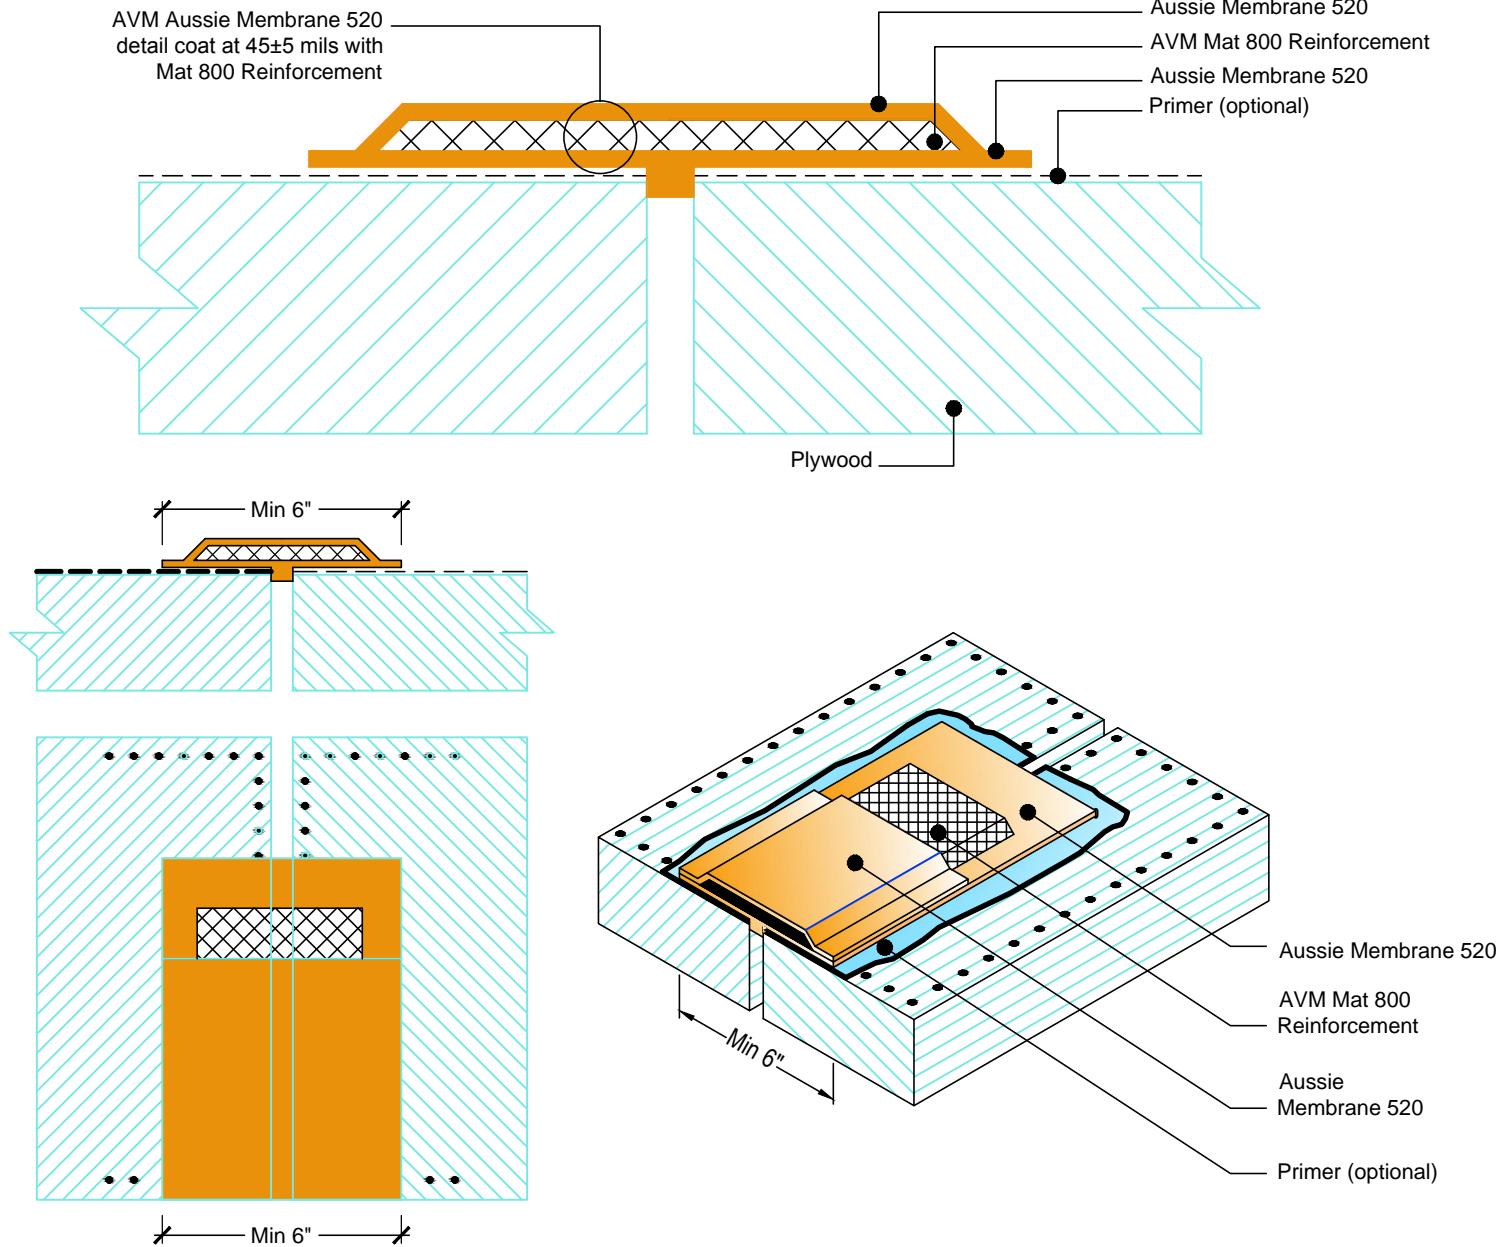


NOTES:

1. This detail may not be applicable or needed if installing metal lath and AVM Crete 6400 over the plywood substrates before installing the Aussie Membrane. (See Detail # AVM-520-2502-P)
2. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
3. For proper membrane thickness and drainage / protection requirements, refer to other "Topping Slab on Plywood" Details.
4. Make sure all nails are flush with the plywood surface or slightly sunken in below it. (Nails protruding above the plywood surface may puncture the membrane)
5. Remove/grind/repair as necessary any other protrusions, sharp edges, etc that may puncture or damage the membrane.
6. Reinforce the Aussie Membrane with AVM Mat 800 as shown at all plywood joints, flashings, penetrations, etc.
7. If extra protection is needed, use double reinforcement. (two layers of Mat 800 reinforcing fabric)

DETAIL #: AVM-0520-2582-P  
 AVM SYSTEM 520  
 AUSSIE MEMBRANE 520

Metal Straps at Plywood Joints Detail  
 for Topping Slabs Waterproofing on  
 Plywood Substrates  
 AVM AUSSIE MEMBRANE 520  
 Fluid Applied Waterproofing.

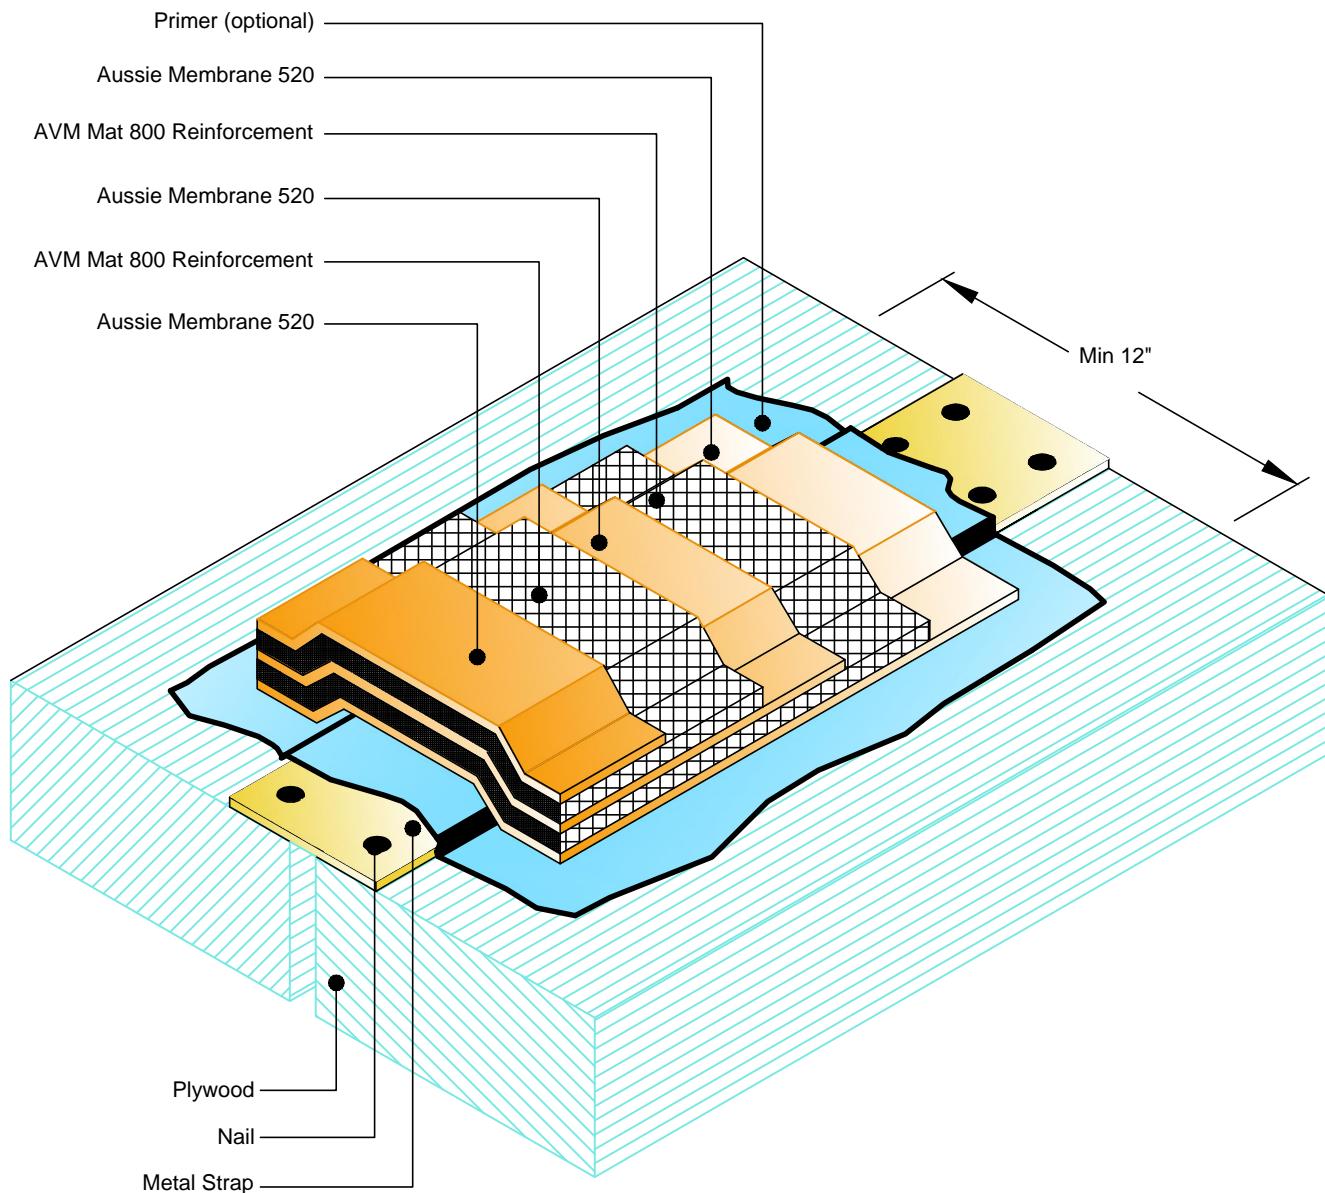

NOTES:


1. This detail may not be applicable or needed if installing metal lath and AVM Crete 6400 over the plywood substrates before installing the Aussie Membrane. (See Detail # AVM-520-2502-P)
2. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
3. For proper membrane thickness and drainage / protection requirements, refer to other "Topping Slab on Plywood" Details.
4. Make sure all nails are flush with the plywood surface or slightly sunken in below it. (Nails protruding above the plywood surface may puncture the membrane)
5. Remove/grind/repair as necessary any other protrusions, sharp edges, etc that may puncture or damage the membrane.
6. Metal straps must be reinforced with Aussie Membrane 520 and a single layer of Mat 800 to prevent damage to the membrane. For extra protection, double reinforce as shown. (use two layers of Mat 800)
7. After preparing the metal straps and surrounding plywood surfaces, apply a liberal coat of Aussie Membrane 520 before installing the first layer of fabric to ensure the strap edges and nail heads will not cut into or damage the fabric.

DETAIL #:  
AVM-0520-3002-P

AVM SYSTEM 520

AUSSIE MEMBRANE 520

Pavers on Concrete Substrate over  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

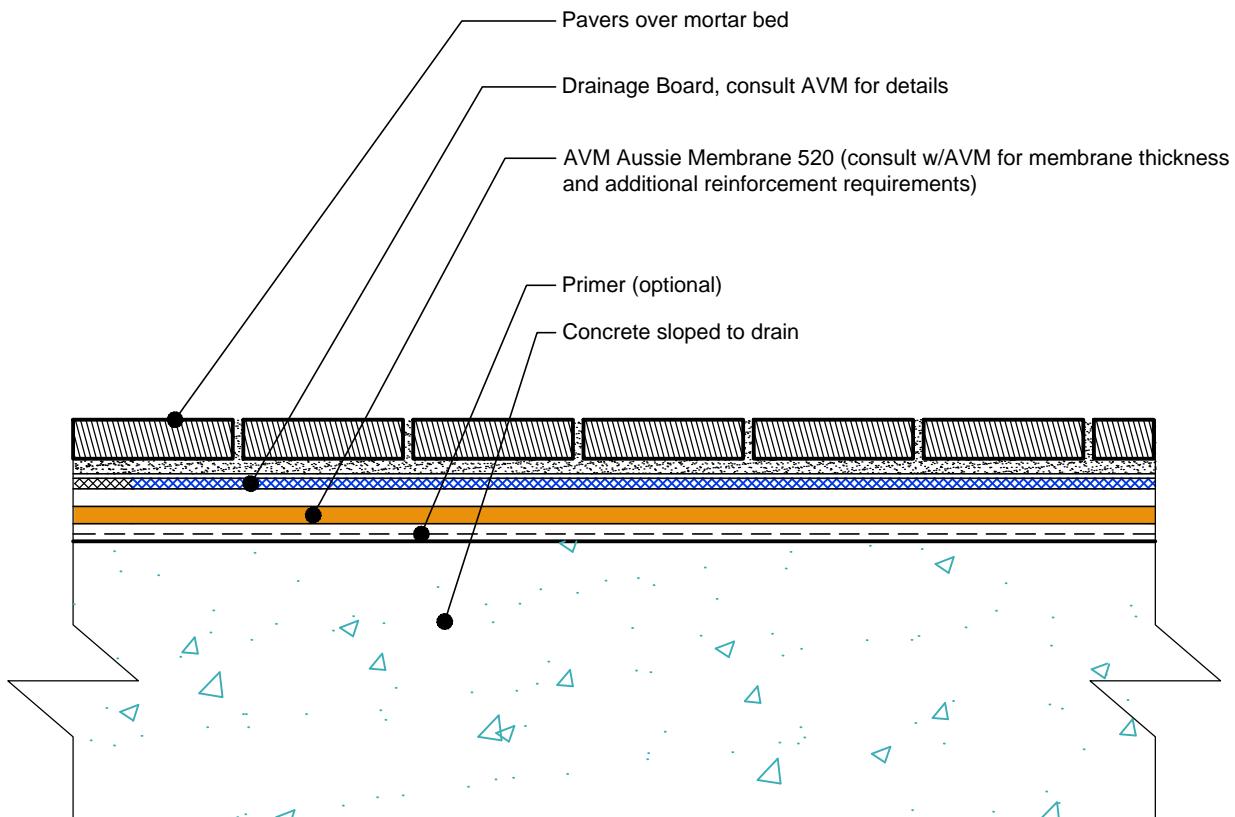


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.

DETAIL #:  
AVM-0520-3502-P

AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Pavers on Plywood Substrate over  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

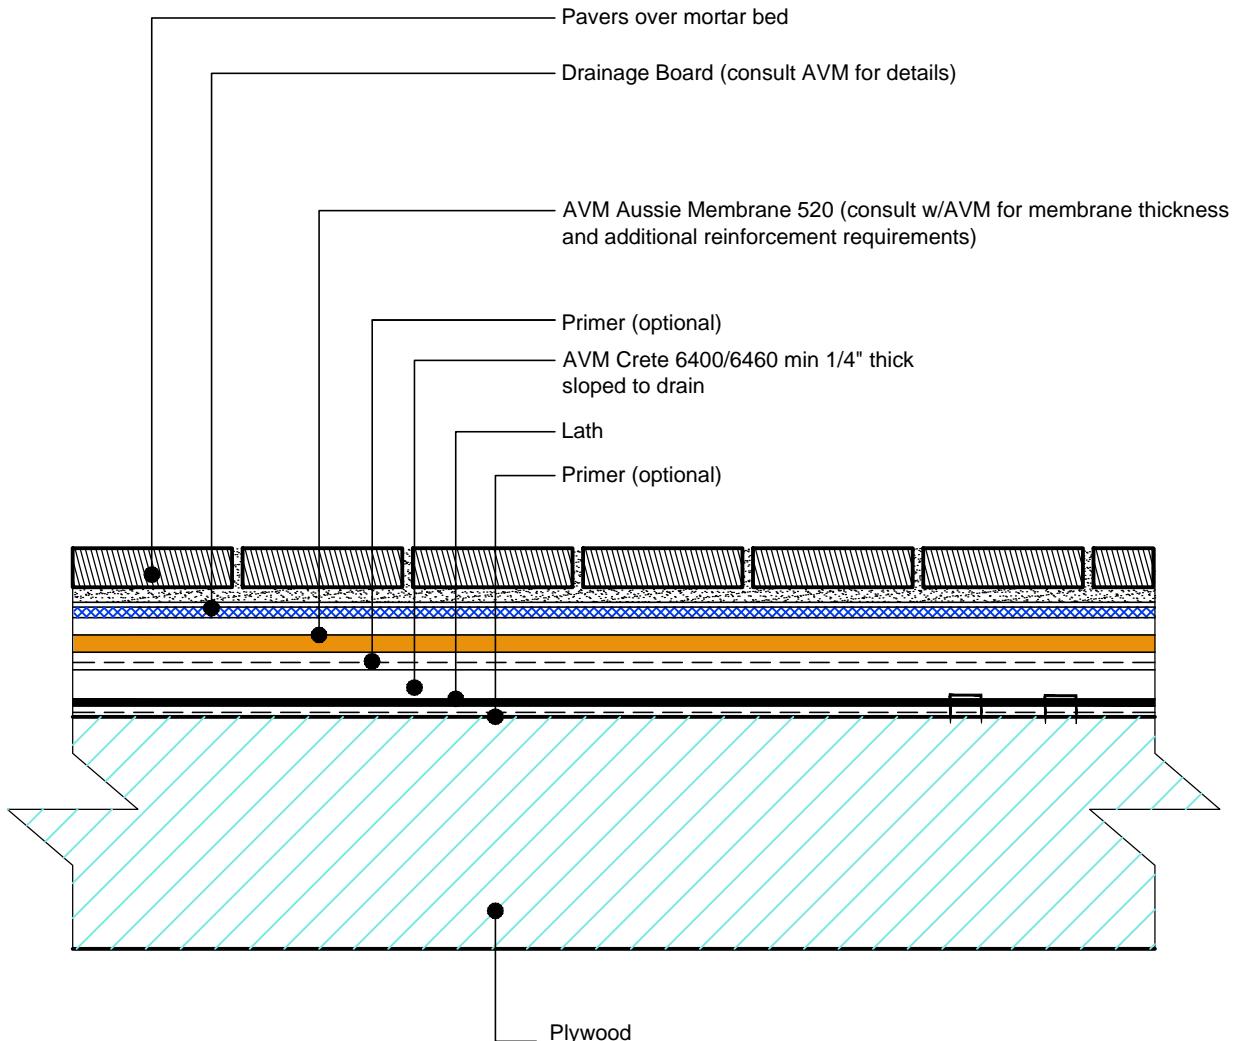

NOTES:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. Crete 6400/6460. Refer to the Crete 6400 or Crete 6460 Technical Data Sheets or Installation Instructions for more info.

DETAIL #:  
AVM-0520\_6002-C

AVM SYSTEM 520

AUSSIE MEMBRANE 520

Terminations  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

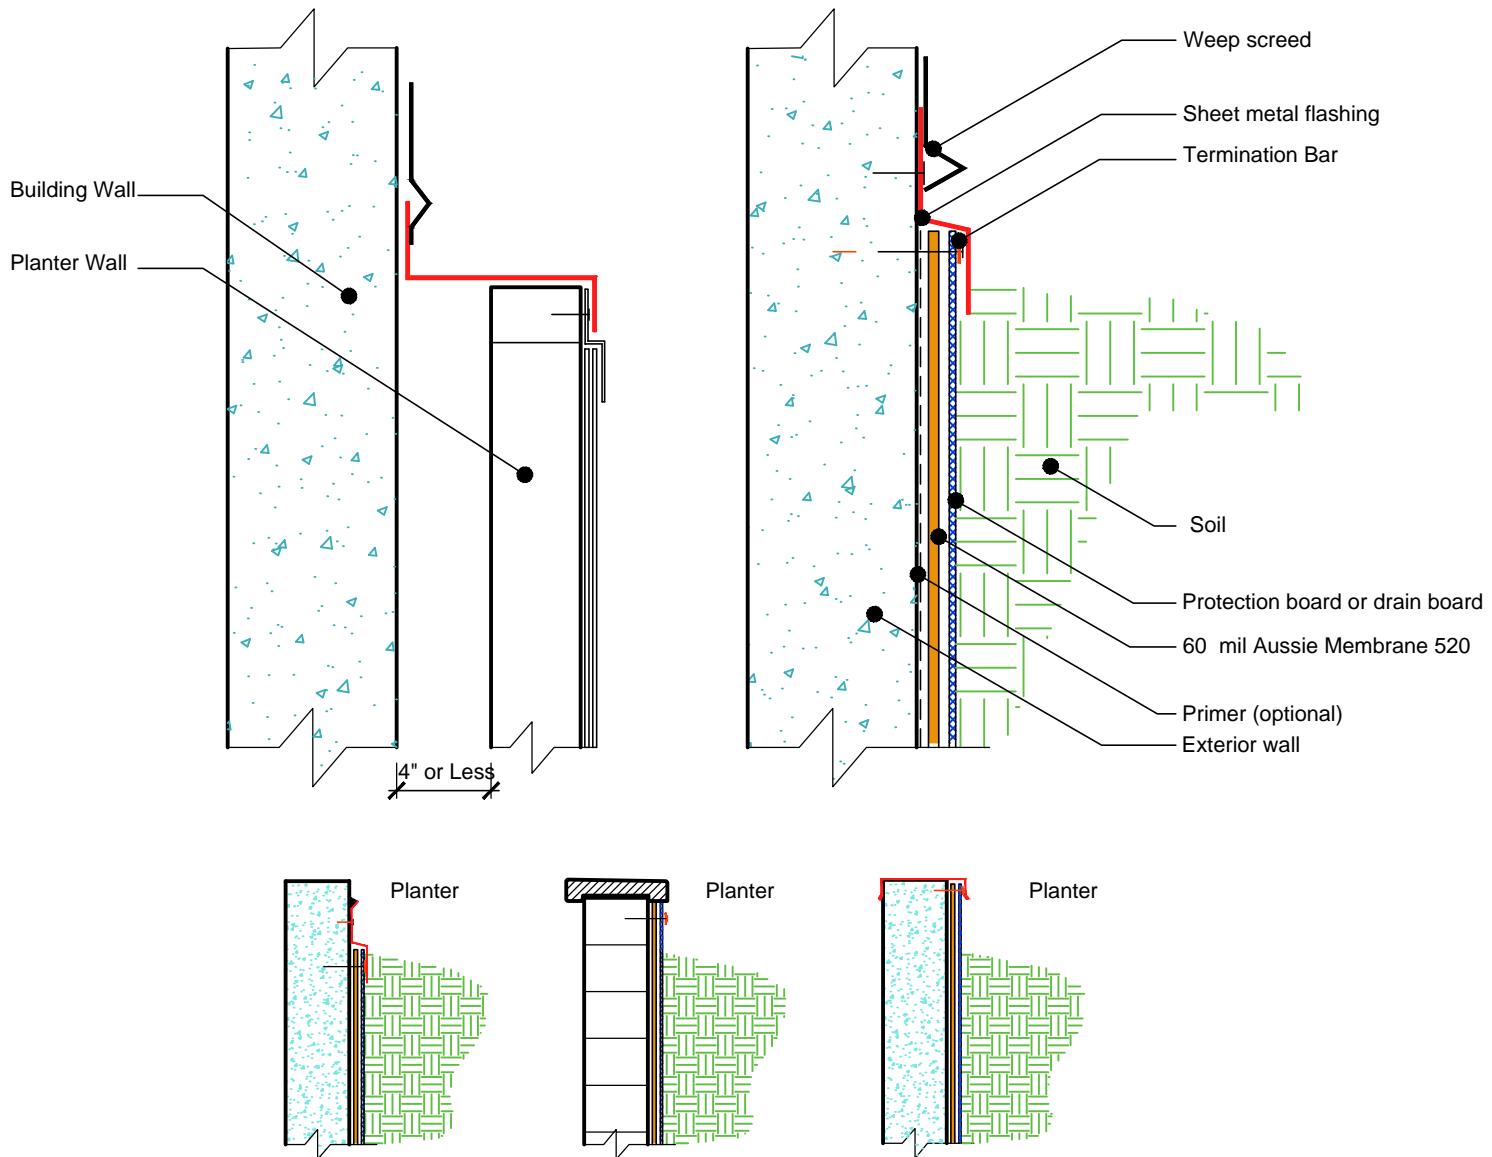


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.

DETAIL #:  
AVM-0520-6004-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Terminations at Sidewalks on Grade  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

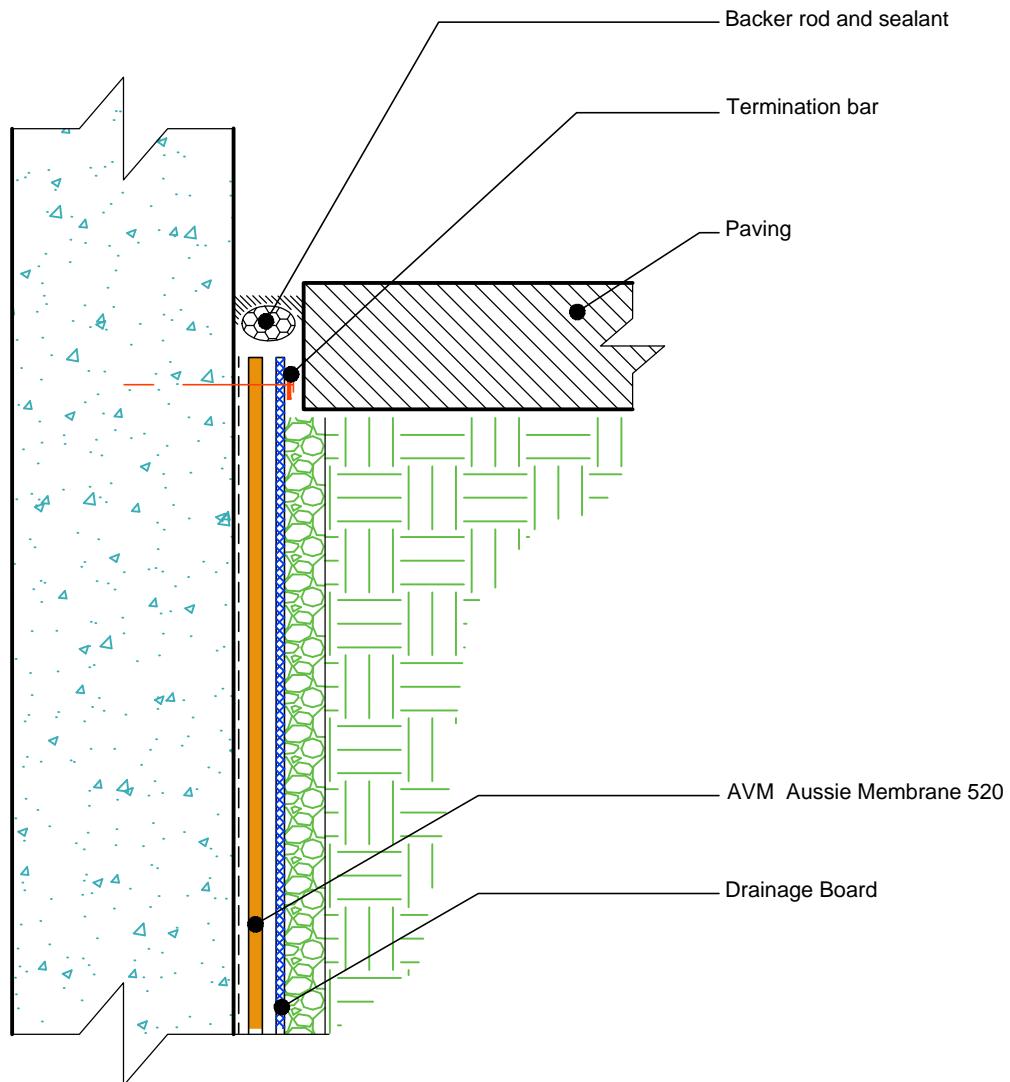

NOTES:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.

DETAIL #:  
AVM-0520\_6502-C

AVM SYSTEM 520

AUSSIE MEMBRANE 520

Pipe Penetration Thru Wall (Option 1)  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

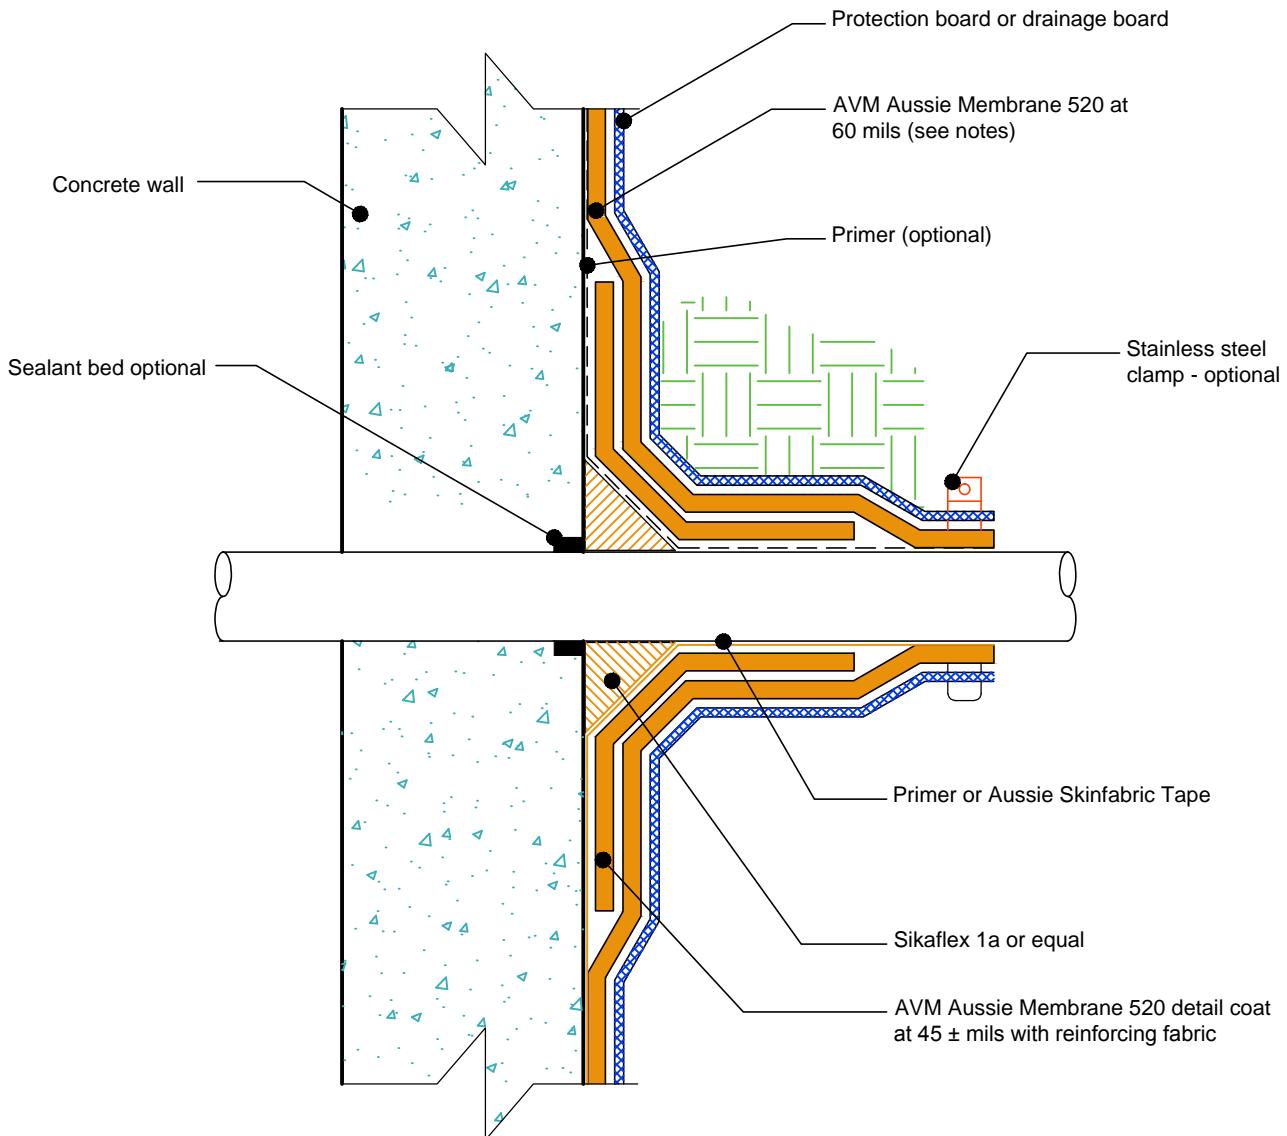

NOTES:


1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. With Sealant around pipe.
5. Aussie Membrane 520 must properly bond to pipe penetration. Use epoxy primer or Aussie Skin Fabric Tape. In addition, use clamp if needed.
6. Sealant must properly bond to pipe penetration. Use approved primer or Aussie Skin Fabric Tape.

DETAIL #:  
AVM-0520-6504-C

AVM SYSTEM 520

AUSSIE MEMBRANE 520

Pipe Penetration Thru Wall (Option 2)  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

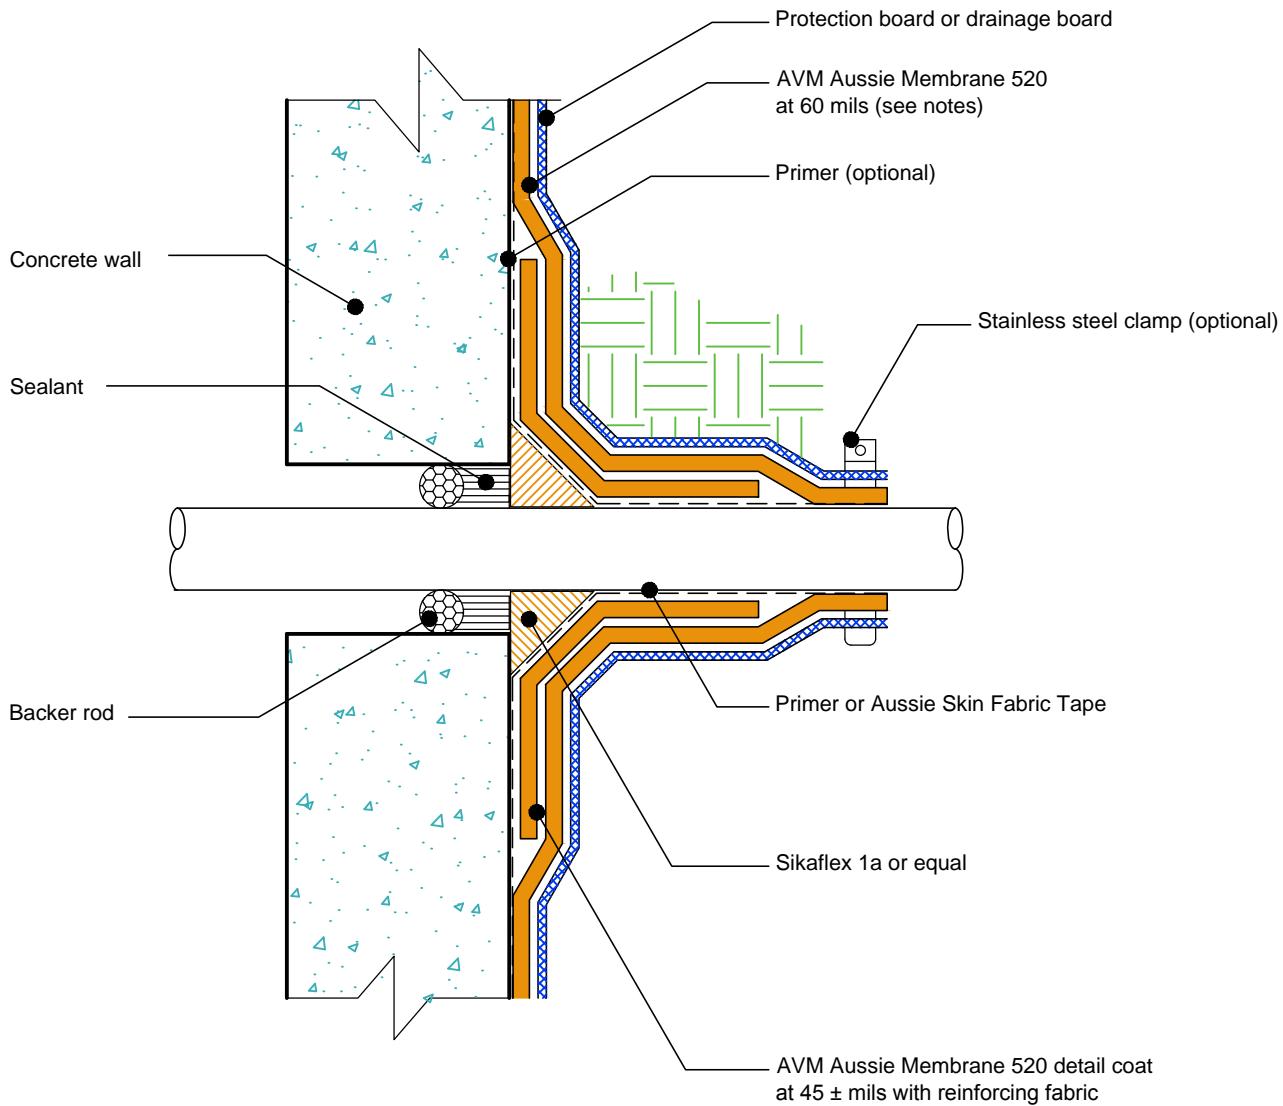


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. With Backer Rod and Sealant around pipe 33.
5. Aussie Membrane 520 must properly bond to pipe penetration. Use epoxy primer or Aussie Skin Fabric Tape. In addition, use clamp if needed.
6. Sealant must properly bond to pipe penetration. Use approved primer or Aussie Skin Fabric Tape.

DETAIL #:  
AVM-0520-6506-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Pipe Penetration Thru Wall (Option 3)  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

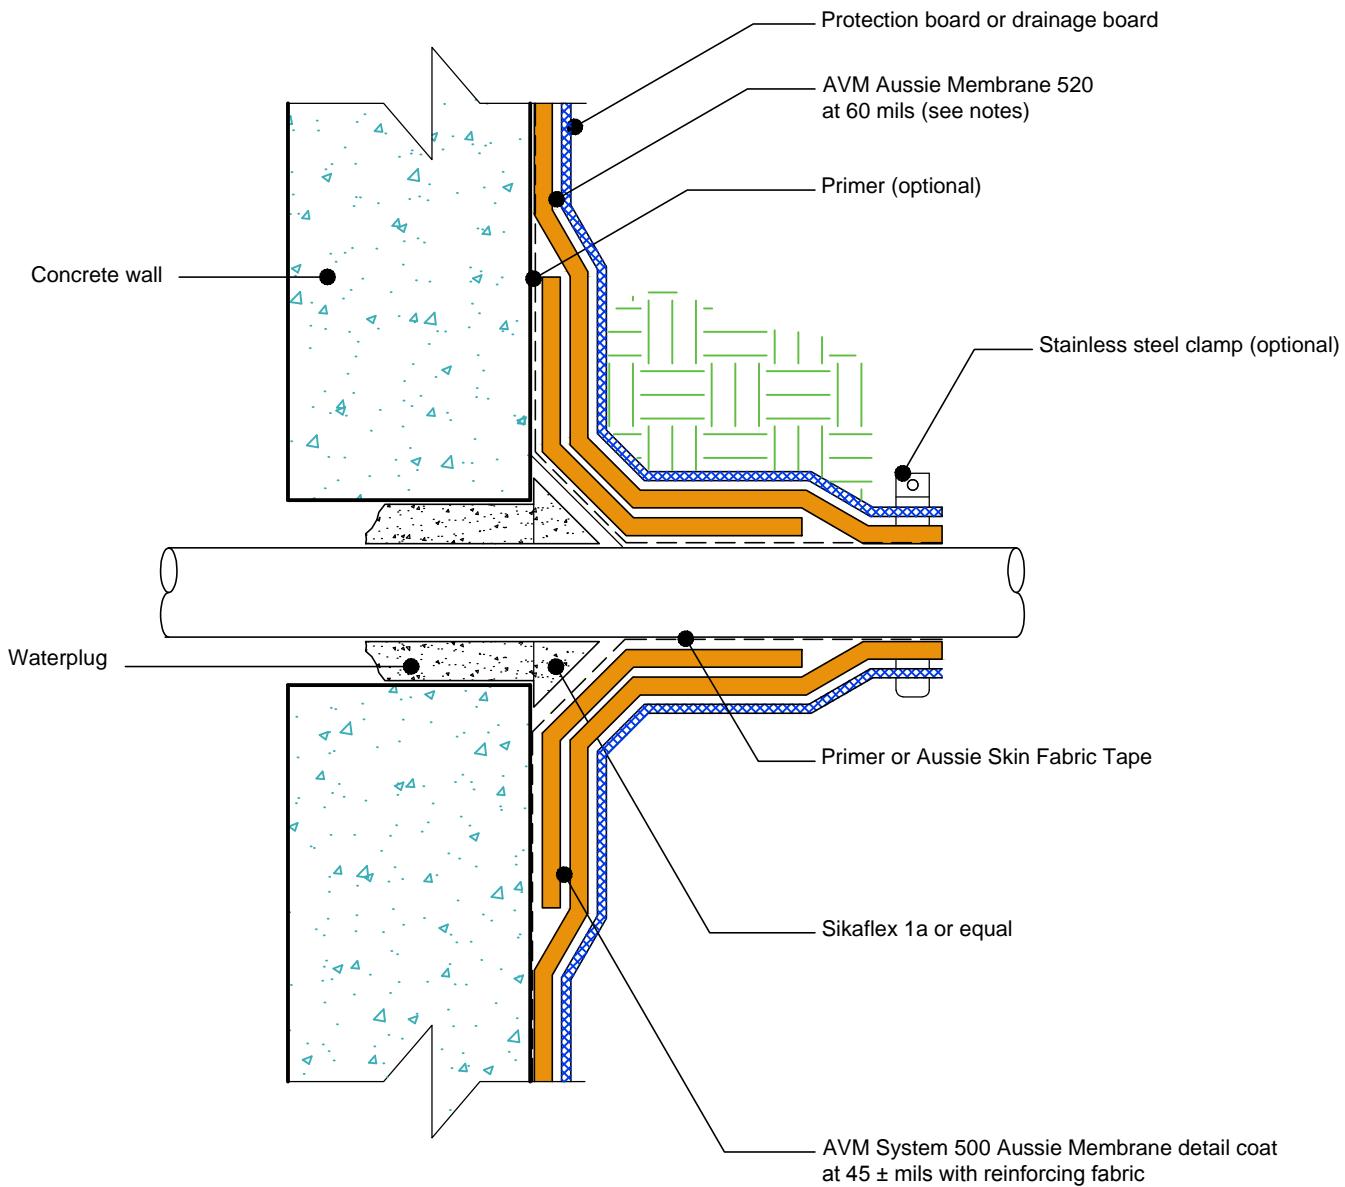


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. With Water Plug and Sealant around pipe
5. Aussie Membrane 520 must properly bond to pipe penetration. Use epoxy primer or Aussie Skin Fabric Tape. In addition, use clamp if needed.
6. Sealant must properly bond to pipe penetration. Use approved primer or Aussie Skin Fabric Tape.

DETAIL #:  
AVM-0520-6702-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Pipe Penetration Thru Slab (Option 1)  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

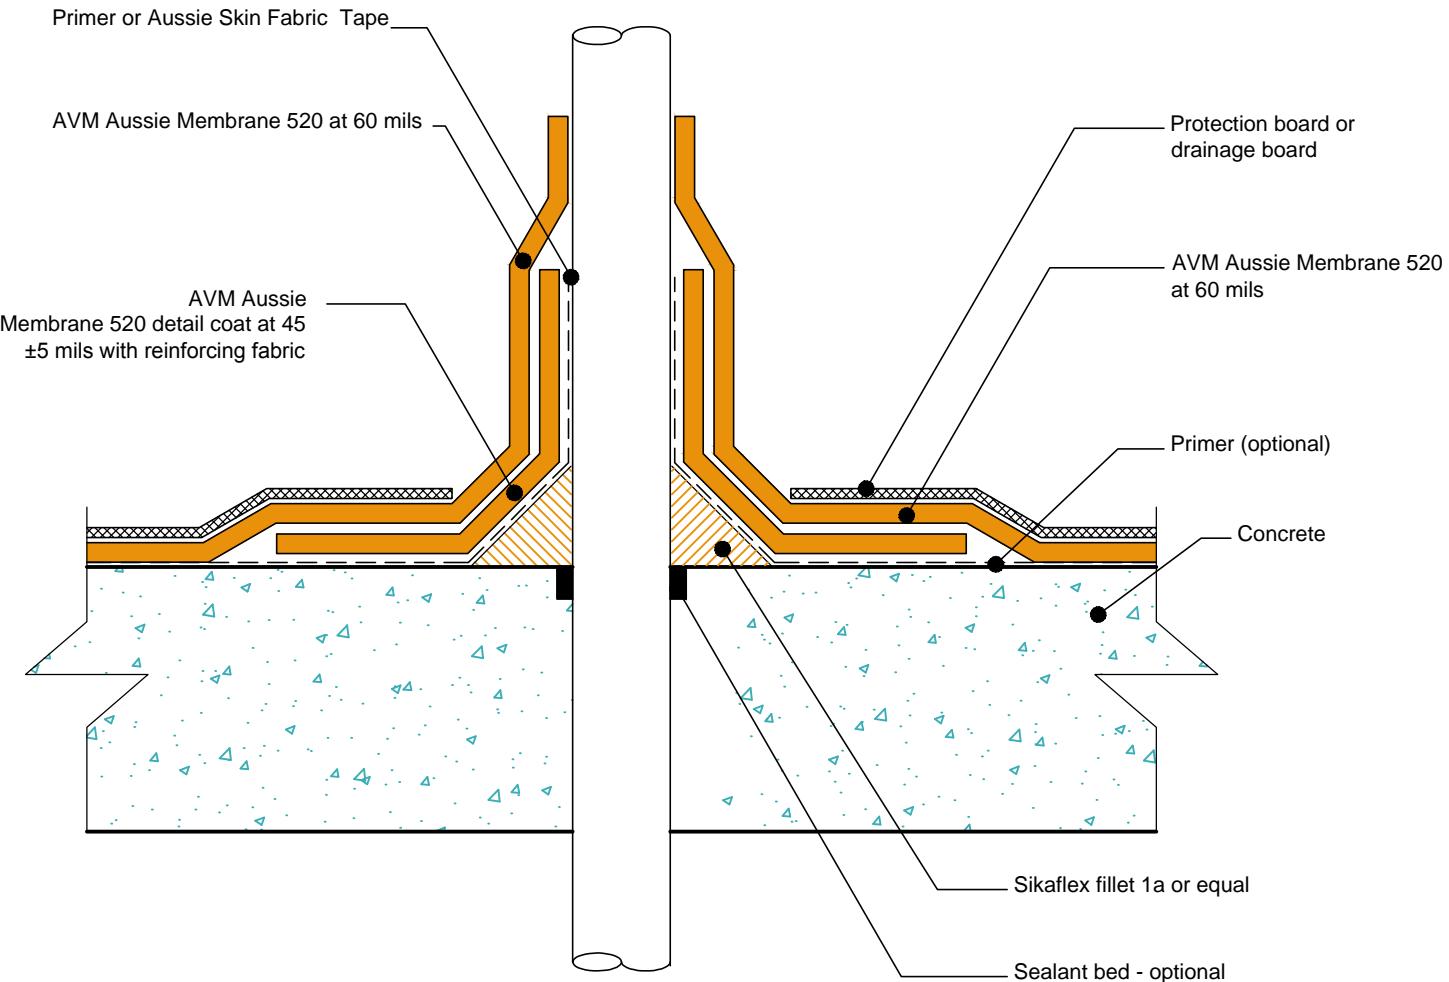


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. With Sealant around pipe.
5. Aussie Membrane 520 must properly bond to pipe penetration. Use epoxy primer or Aussie Skin Fabric Tape.
6. Sealant must properly bond to pipe penetration. Use approved primer or Aussie Skin Fabric Tape.

DETAIL #:  
AVM-0520\_6704-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Pipe Penetration Thru Slab (Option 2)  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

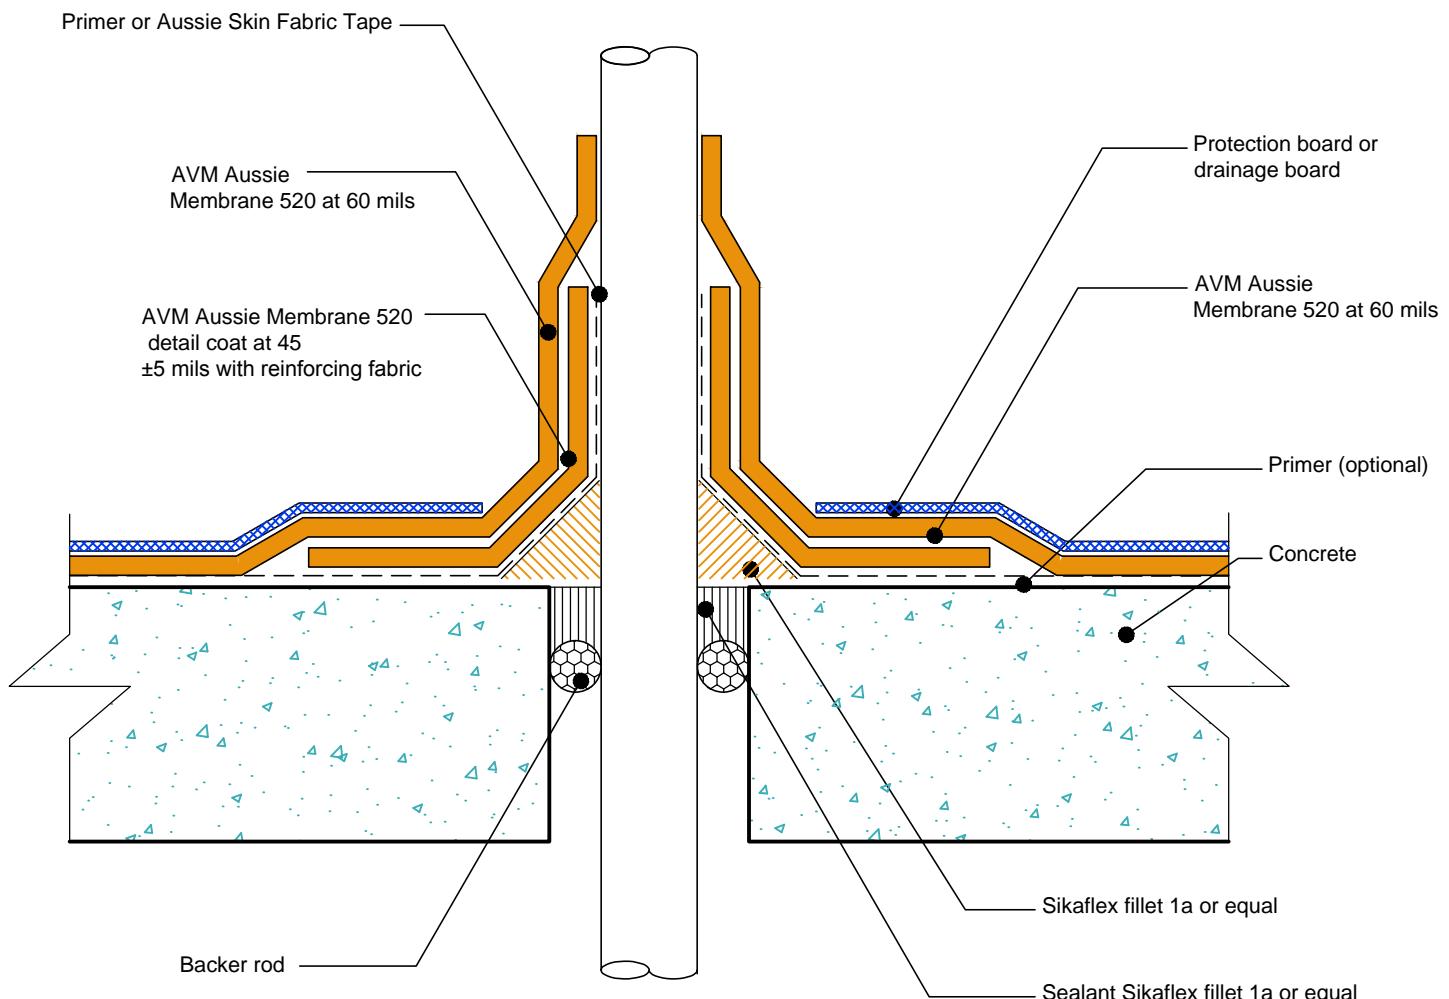


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. With Backer Rod and Sealant around pipe.
5. Aussie Membrane 520 must properly bond to pipe penetration. Use epoxy primer or Aussie Skin Fabric Tape.
6. Sealant must properly bond to pipe penetration. Use approved primer or Aussie Skin Fabric Tape.

DETAIL #:  
AVM-0520-7002-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Area Drain Detail  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

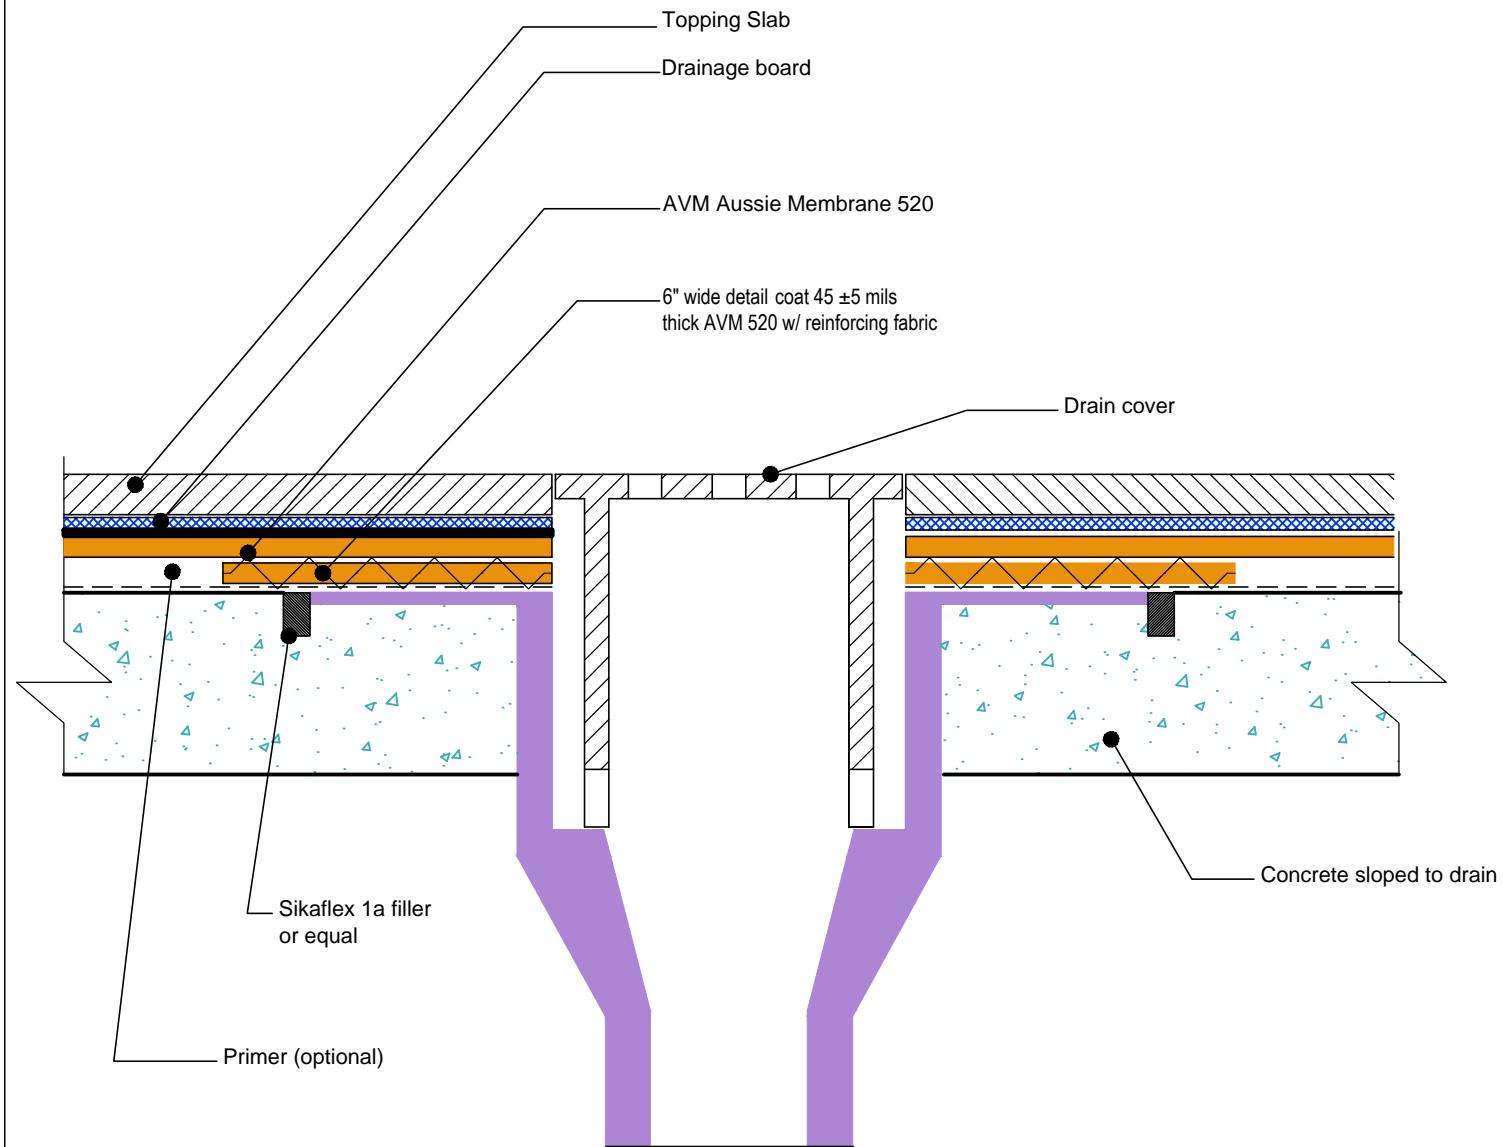


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. For drainage and protection on topping Slabs up to 4" thick for pedestrian applications, use AVM Drain Board 6000.
5. For drainage and protection on topping slabs over 4" thick or for vehicular applications, use AVM Drain Board 9000.
6. Reinforce the Aussie Membrane 520 with AVM Mat 800 at all corners, metal transitions, penetrations, gaps, drains, etc.

DETAIL #:  
AVM-0520-7502-C  
AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Transition Horizontal to Vertical  
Topping Slab or Pavers  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

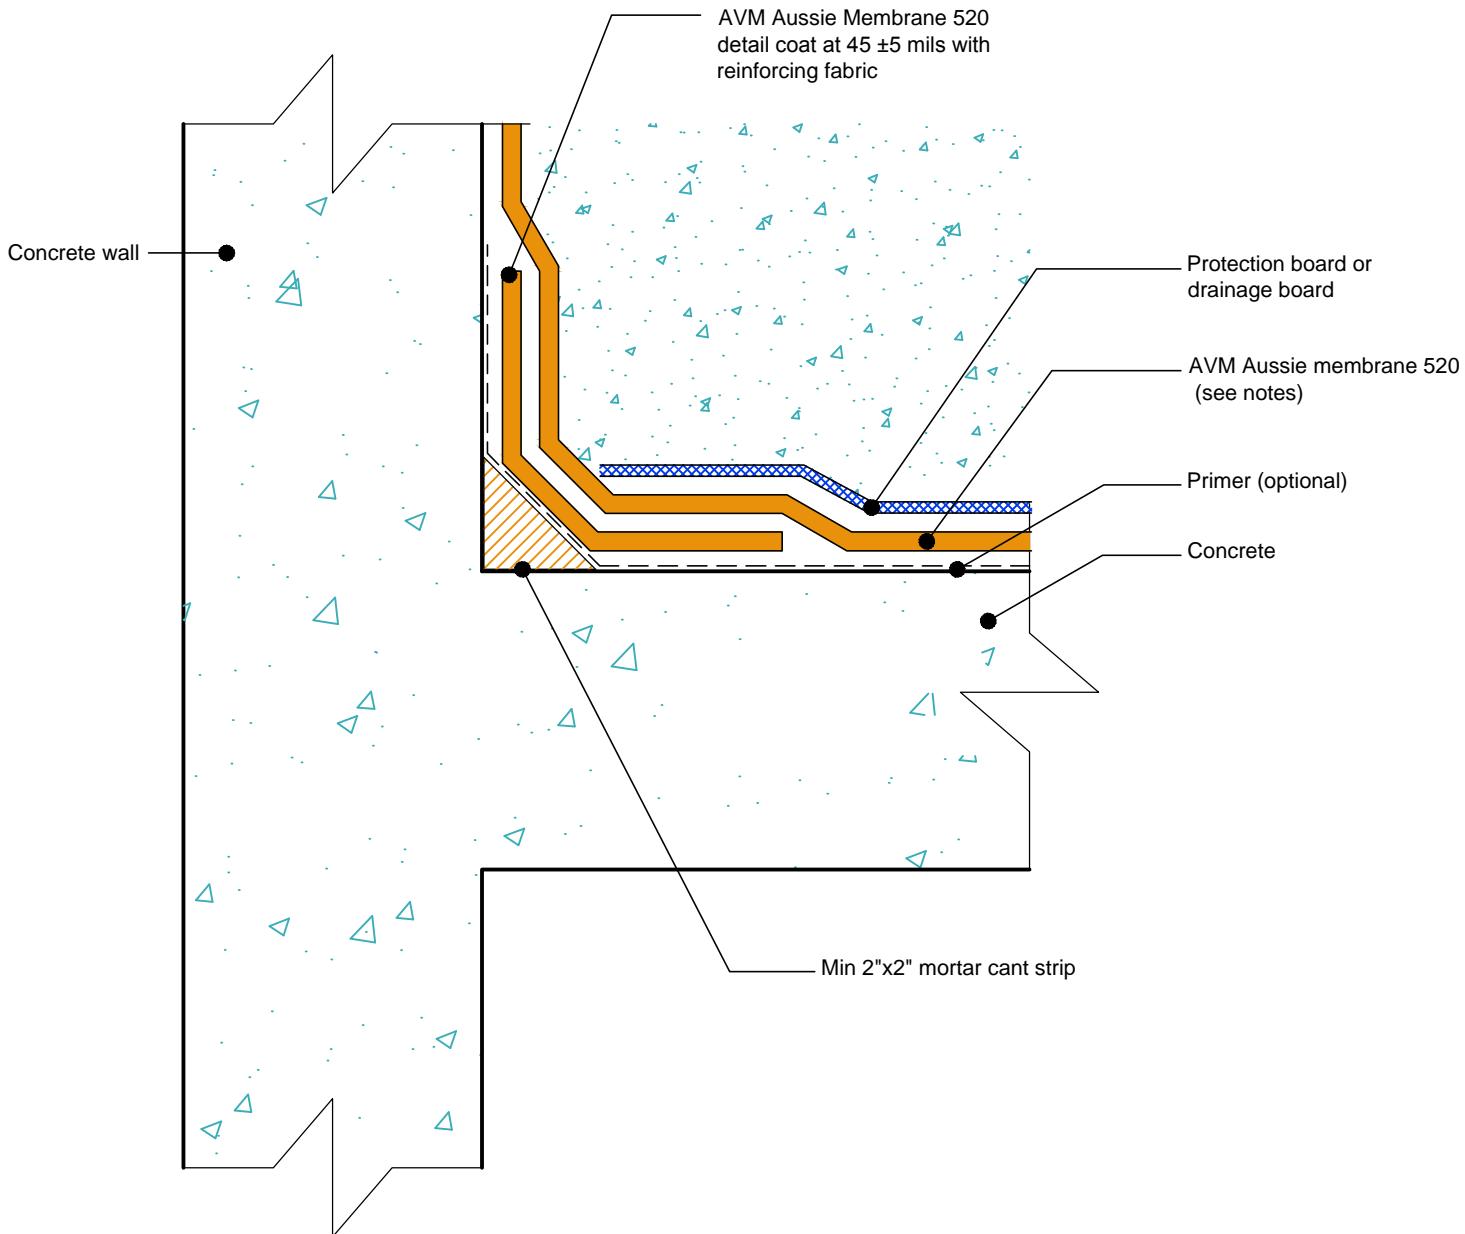


NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. Mortar cant strip and detail coat at the cold joint may be replaced with other cold joint details with prior approval from AVM.

DETAIL #:  
AVM-0520-7504-C

AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Transition At Depressed Slab  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.

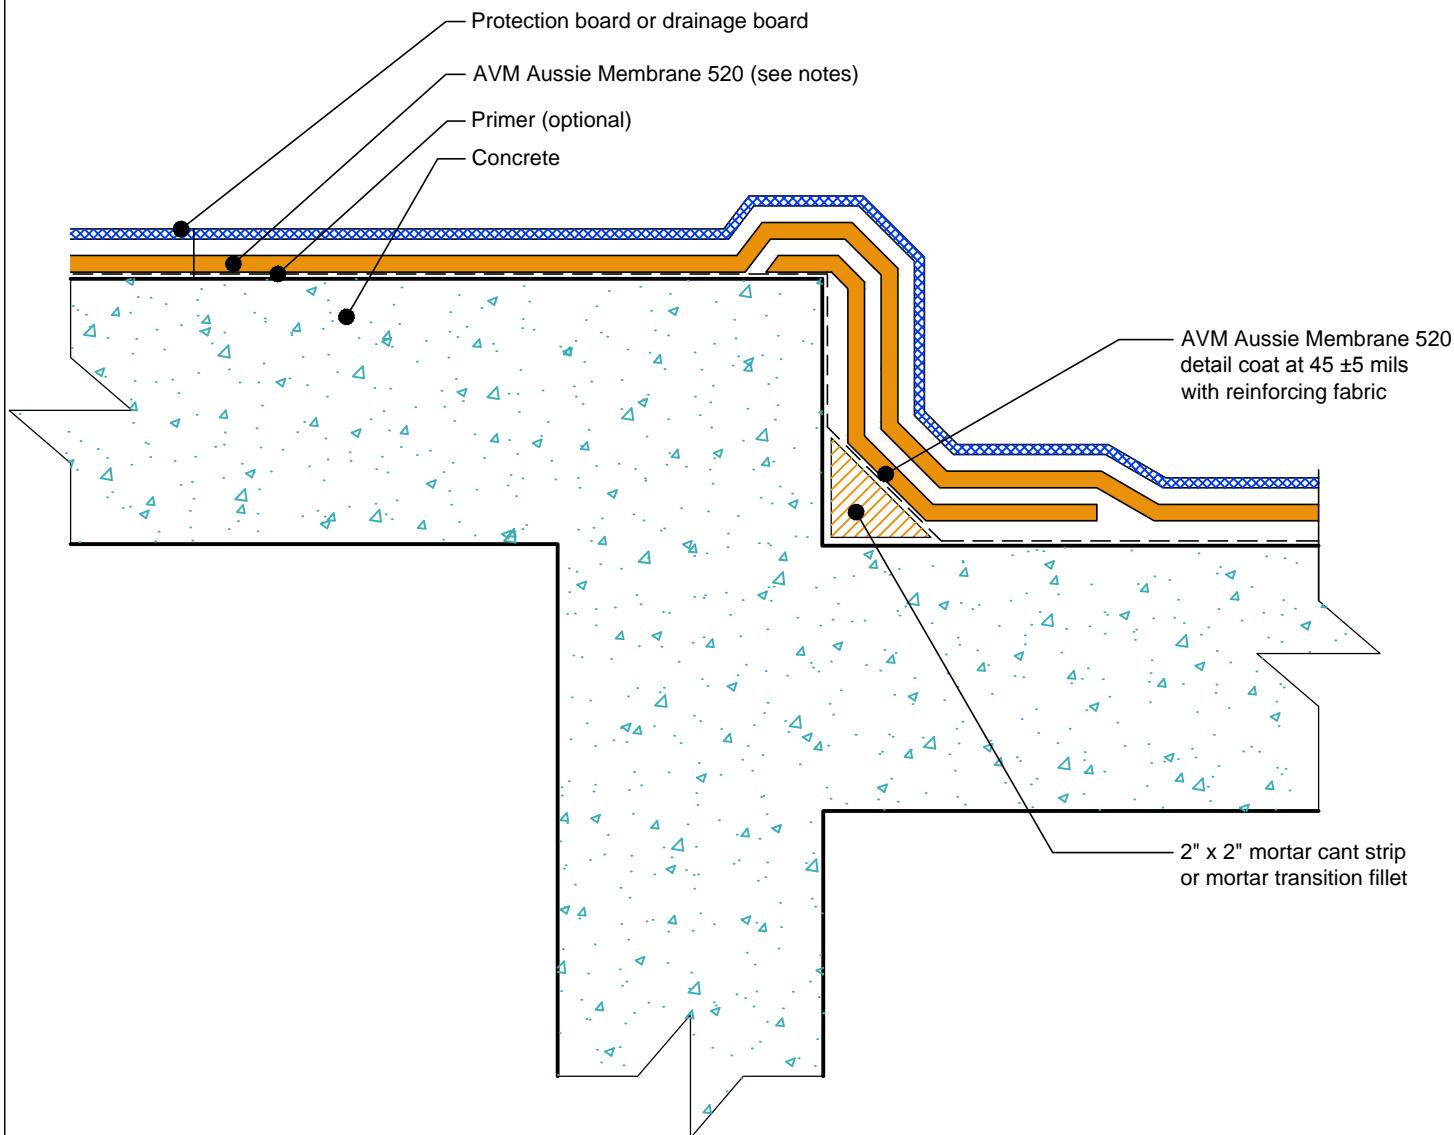

NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.
4. Mortar cant strip and detail coat at the cold joint may be replaced with other cold joint details with prior approval from AVM.

DETAIL #:  
AVM-0520-8002-C


AVM SYSTEM 520  
AUSSIE MEMBRANE 520

Crack Repair (Option 1)  
AVM AUSSIE MEMBRANE 520  
Fluid Applied Waterproofing.



Crack less than 1/16" wide

Crack greater than 1/16" wide

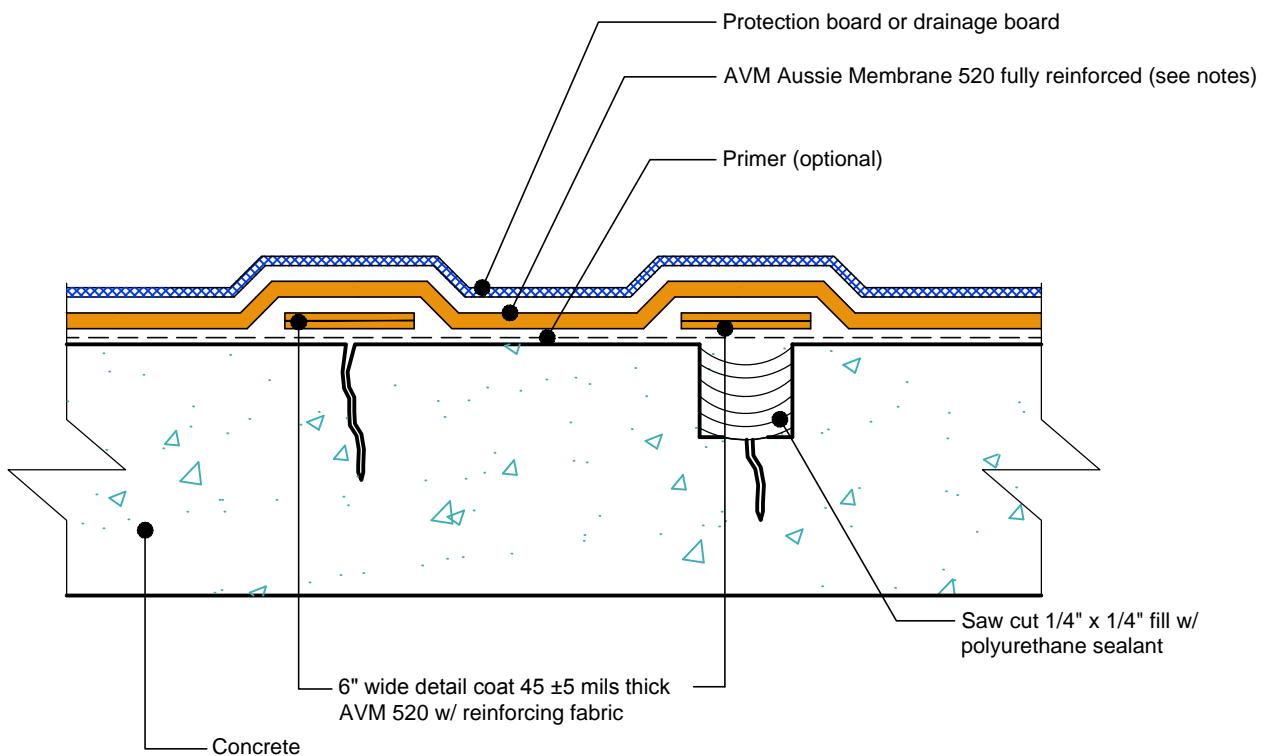

NOTES:

1. Aussie Membrane 520 is a Polyurethane liquid (Roller or Brush Applied) for Below-Grade, Between-Slab, Planters, Roof-Gardens and similar type Waterproofing.
2. For proper membrane thickness and appropriate protection and drainage, refer to AVM Aussie Membrane 520 "Min Thickness Table"
3. Contact AVM if no drain board or protection board is specified.